


ENGLISH

 ***Binatone***
Simply better

WASHING MACHINE

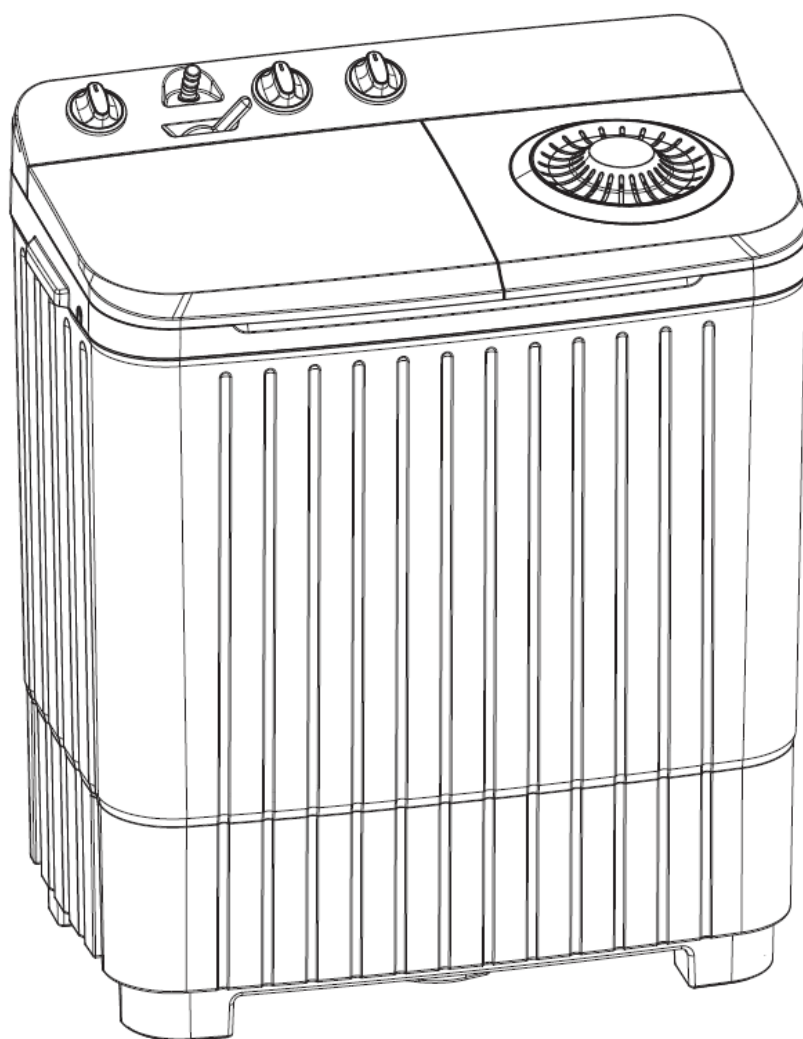

To get the best results from your Binatone product
please read these instructions carefully.

BWM-090D



Binatone has an incredible heritage.

Established – 1958 in London, UK.

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.


This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

www.binatonelifestyle.com

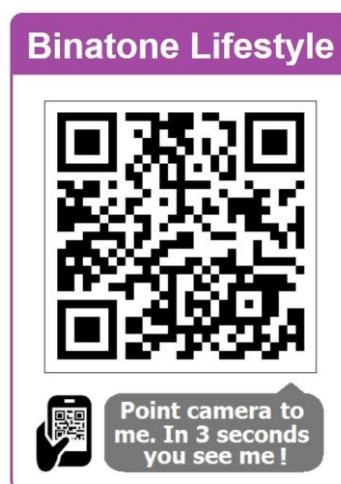

IMPORTANT SAFEGUARDS

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ This product is intended for domestic indoor use only. Do not use outdoors or for commercial purposes.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- ✓ Unplug from the power outlet when not in use & before cleaning.
- ✓ Do not pull, twist or otherwise abuse the power cord.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ The use of accessory attachments not included, recommended, or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.


SPECIFICATION

Total Power: 220-240V~ 50Hz 540W
Wash Input Power 360W
Spin Input Power 180W

- Do not wash raincoat or car cover that are waterproof. If there are clothes that floats on the water surface, you should note the label on the clothes and confirm if it is okay to be washed by washing machine to avoid any break.
- Do not wash the clothes that contain the volatile substances such as gas.
- Waterproof clothing such as down jacket should not be put in the spin tub.




- Do not equip the machine in the bathroom where the place is humid and do not wash the machine.
- Do not put the machine on the place where it is hard to drain water.
- Do not put the wet clothing on the machine especially on the control panel.

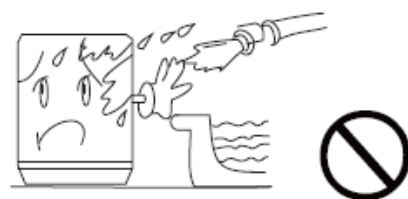



- Do not alter the specifications or attempt to modify this product in any ways.
- Do not use the water hotter than 50
- Do not put the items on the washing machine.
- Keep the appliance away from the direct sunlight and heat sources like the heater.
- The distance between washing machine and wall is at least 5cm.



- This appliance is not intended for use by person(including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not let the children climb the machine.
- Do not put the hand into the working machine. It is dangerous even if the speed is very slow.
- Do not let children play with the carton or any other packages.
- When the machine with glass top lid is open, the angle between top lid and horizontal plane is more than 60 degree then the lid can be released, avoiding any accident.

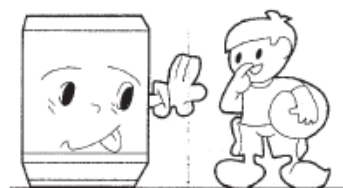

KNOW YOUR APPLIANCE

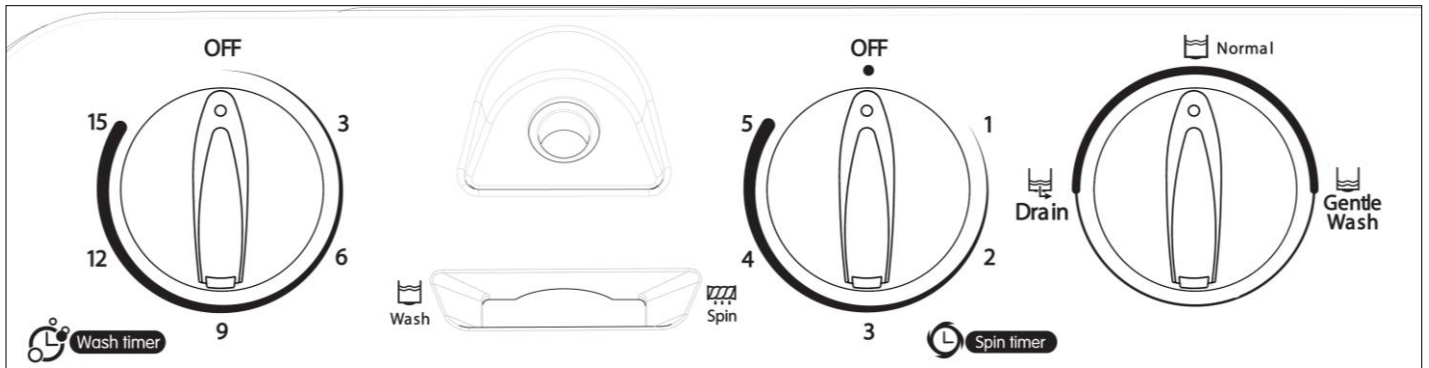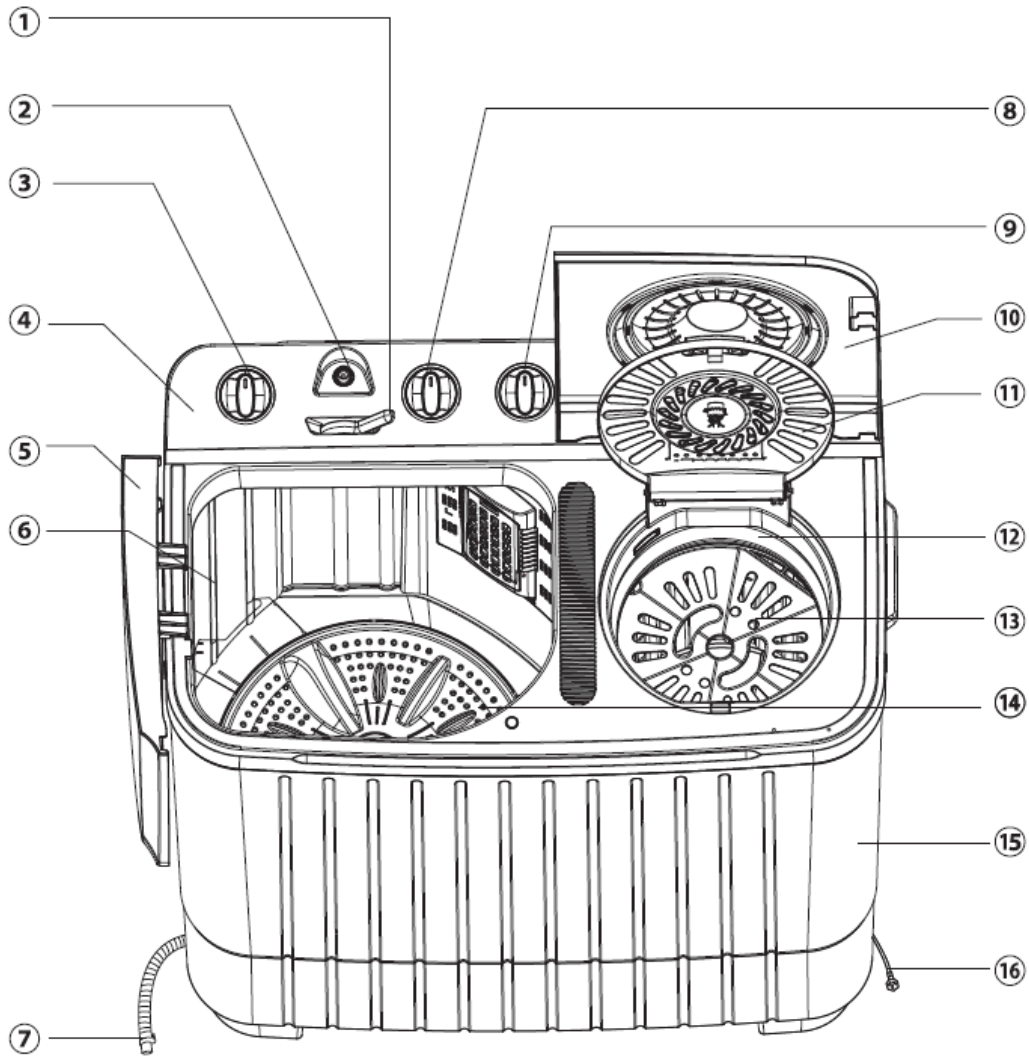

- 1) Water Inlet Select Switch
- 2) Water Inlet connection
- 3) Wash Timer
- 4) Control panel
- 5) Washing Machine Cover
- 6) Wash Tub
- 7) Drainpipe
- 8) Spin Timer

- 9) Wash Program
- 10) Outer Cover for Spin Dryer
- 11) Inner Cover for Spin Dryer
- 12) Spin Tub
- 13) Safety Cover for Spin Dryer
- 14) Pulsator
- 15) Outer Housing
- 16) Power Cord

BEFORE FIRST USE

Carefully remove all packaging and assemble the product following the setup & operating instructions below.

SETUP INSTRUCTIONS

Water Inlet Connection

1. Only use the new hose set supplied with this product – do not reuse old hoses, to prevent leaks.
2. Insert the inlet hose to the water inlet connection (2) on the control panel (4).

Power Connection

1. Ensure the mains voltage in your location is correct for the appliance.
2. Ensure the mains connection is fully earthed (grounded)
3. Connect the plug & power cord (16) to the socket


Drain Connection

1. The height of the drainpipe (7) should be no more than 10cm above the washing machine outlet – to avoid leakage and blockage.


The drainpipe (7) should be free of kinks – allowing a smooth flow

2. Do not obstruct the drainpipe (7) to ensure smooth drainage
3. Should you need to cut the drainpipe (7) length – cut at angle to provide a bevel – for easier flow.
4. Should you need a longer drainpipe, please purchase an extension (inner diameter at least 30mm - max length 1.5m)

1 Connect inlet pipe




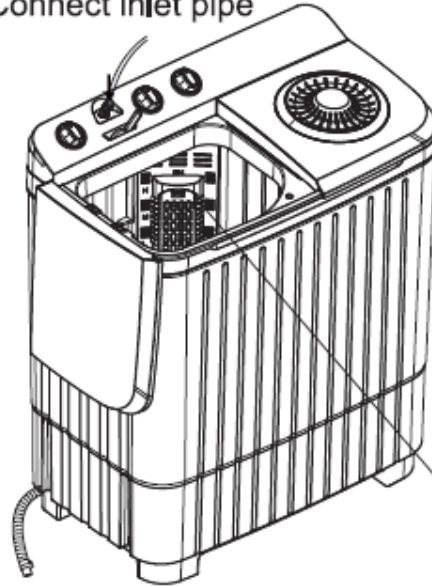


2 Put through power

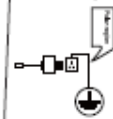 


4 Check that the chip filter is installed

3 Put down the drainpipe

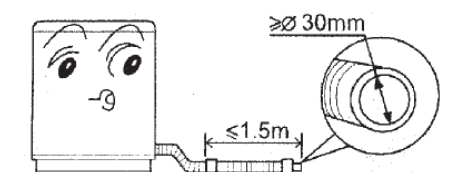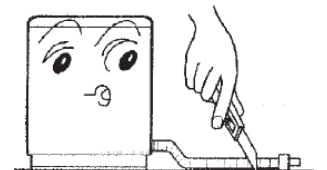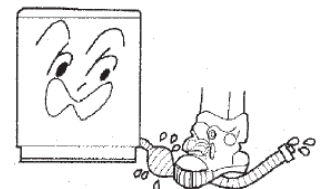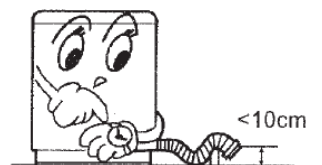

Lint Filter Installation

This appliance is fitted with a lint/chip filter – inside the wash tub (6). This must be fitted used for every wash cycle, to improve performance & extend the life of the unit.

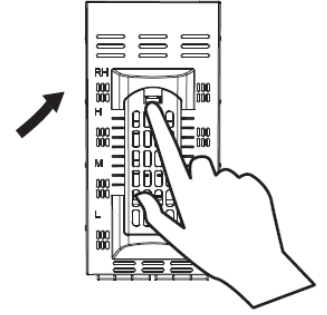

1. Insert the bottom of the filter into the slot
2. Press the top of the filter to snap it into position

Note: We recommend the lint/chip filter is removed and cleaned after each laundry cycle.

LAUNDRY PREPARATION

1. Check the intended laundry items are suitable for washing machines.
Check if there is any special requirement for the laundry garments.
2. Damaged clothes should be mended before washing
3. Coloured clothes should be washed separately from white/light coloured ones.
4. Before washing – empty all pockets of items that may have been left inside.
Note: small items such as coins & keys etc may damage the drain pump.
5. We recommend buttons are fastened and zippers closed.
6. We recommend that garments with buttons and zippers are turned inside-out – to reduce noise during the wash cycle.
7. Load the laundry loosely, observing the max capacity weight.

Do not overload the machine

Notes:

Please wash any non-absorbent laundry by hand – not in the washing machine

Do not put laundry items soiled by chemicals into the washing machine

Very small items (such as handkerchiefs, ribbons, socks etc) should be washed in a wash bag or a pillowcase

Some stains such as fruit, wine, grass etc are difficult to remove and should be pre-treated with recommended products and soaked to release the stains BEFORE washing in the machine.

OPERATING INSTRUCTIONS


For best results(*), we recommend the laundry cycle should be :

WASH – SPIN – RINSE - SPIN


(*) depends on your fabrics, check the clothing labels carefully.

WASH

- 1) Select WASH on the Water Inlet Select Switch (1).

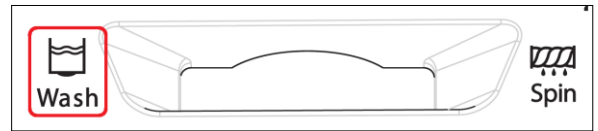

Note: The water level is marked on the lint/chip filter housing – inside the wash tub (6) – as shown at right. It is marked:
H for HIGH, M for MEDIUM and L for LOW.

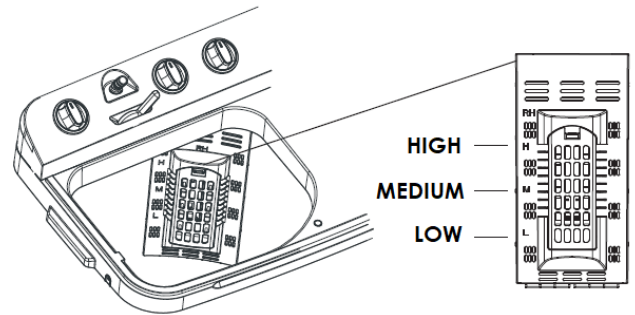


- 2) To wash using washing powder
 - i) Add water to the L “LOW” level mark
 - ii) Add washing powder & run for 30s to dissolve completely.
 - iii) Add laundry
 - iv) Add water (as necessary) to a suitable level (M “MEDIUM” or H “HIGH”)

Note: to instantly dissolve washing powder, we recommend preparing some water at 30°C – adding this to the wash tub (6) and then adding the washing powder. The warm water will help dissolve the washing powder quickly.
For the correct quantity/dosage of washing powder please refer to the washing powder instructions.

It is recommended to use low foam washing powder & environmentally friendly washing powder.


- 3) Select ‘Normal’ or ‘Gentle Wash’ using the Wash Program (9)

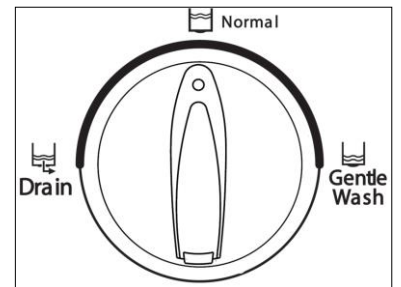


- 4) Select the washing time using Wash Timer (3)

Note: If you wish to set the Wash Timer for 3 minutes or below - it is recommended you turn the Wash Timer (3) control to 6 minutes and then back to 3 minutes.

This helps improve the accuracy & extend the life of the timer.

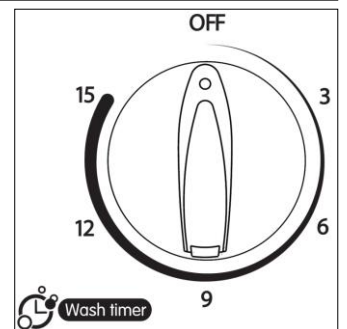


- 5) Once the machine has completed the wash cycle, select the Wash Program (9) to ‘Drain’

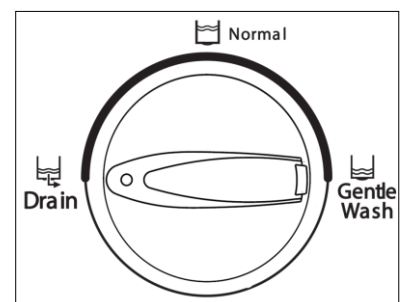

BLEACHING


- 1) Select WASH on the Water Inlet Select Switch (1).

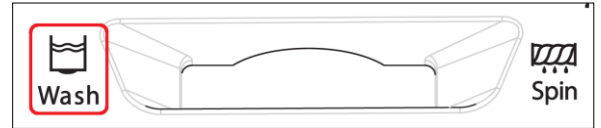

Note: The water level is marked on the lint/chip filter housing – inside the wash tub (6) – as shown at right. It is marked:
H for HIGH, M for MEDIUM and L for LOW.

- 2) To wash using bleach


- i) Dilute the bleach in a container
- ii) Add water in the wash tub (6) to the L “LOW” level mark
- iii) Pour the diluted bleach slowly in to the wash tub (6)
- v) Run washing machine for 30s to stir & distribute the bleach completely.
- vi) Add laundry
- vii) Add water (as necessary) to a suitable level (M “MEDIUM” or H “HIGH”)

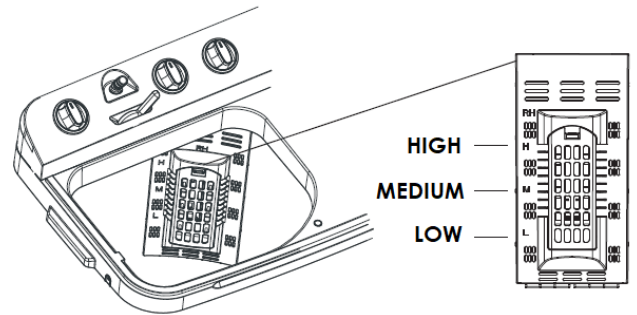


Note: Do not use bleach for coloured or figured laundry – they may lose colour
Do not put bleach directly to the laundry
Refer to the usage manual for the bleach product in use
Please dissolve powdered bleach well before use.

RINSE

- 1) Select WASH on the Water Inlet Select Switch (1).

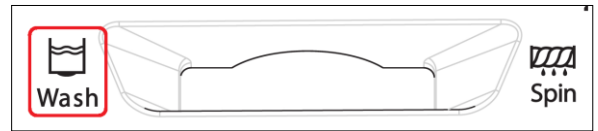


Note: The water level is marked on the lint/chip filter housing – inside the wash tub (6) – as shown at right. It is marked:
H for HIGH, M for MEDIUM and L for LOW.

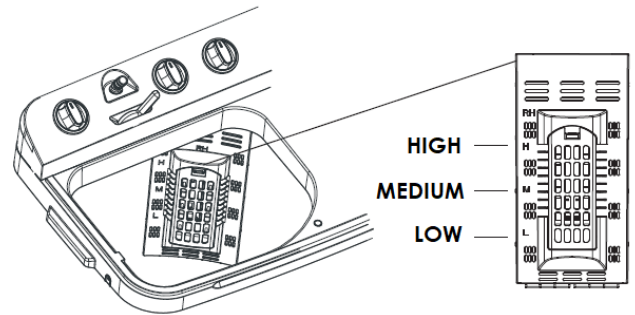


- 2) To rinse :
 - i) Add water (as necessary) to a suitable level (L :LOW", M "MEDIUM" or H "HIGH") to just cover the laundry

- 3) Select 'Normal' or 'Gentle Wash' using the Wash Program (9)

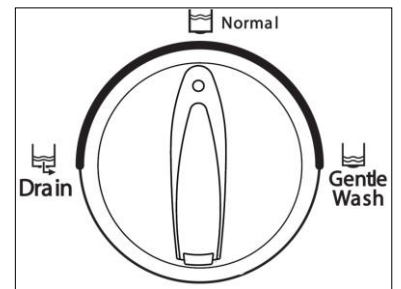


- 4) Select the washing time using Wash Timer (3)

Note: If you wish to set the Wash Timer for 3 minutes or below - it is recommended you turn the Wash Timer (3) control to 6 minutes and then back to 3 minutes.
This helps improve the accuracy & extend the life of the timer.

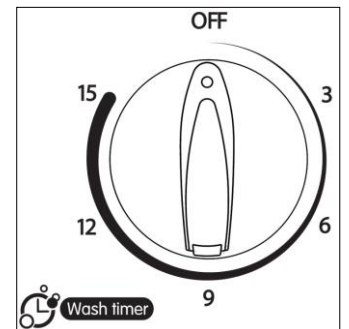


- 5) Once the machine has completed the wash cycle, select the Wash Program (9) to 'Drain'

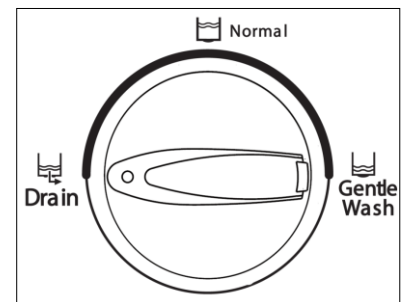

SPIN

- 1) Select SPIN on the Water Inlet Select Switch (1).

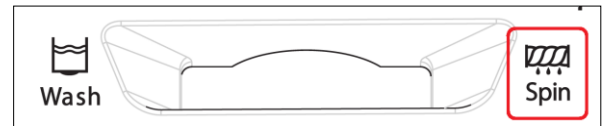


Place the laundry into the spin tub (12) carefully.

- 2) Close the Inner Cover for Spin Dryer (11), followed by the Outer Cover for Spin Dryer (10)

Select the spin time using the Spin Timer (8)

Note: If you wish to set the Spin Timer for 2 minutes or below - it is recommended you turn the Spin Timer (8) control to 3 minutes and then back to 2 minutes.

This helps improve the accuracy & extend the life of the timer.

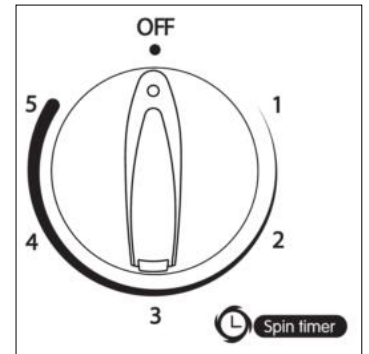

CAUTION : If you open the Outer Cover for Spin Dryer (10) during operation, the unit will automatically switch off, as a safety feature. To resume spin cycle, close the lid securely again, machine will continue.

CARE AND CLEANING


Before cleaning and maintenance:

- 1) Close the tap feeding water to the unit
- 2) Ensure the wash tub (6) & spin tub (12) are completely empty of water.
- 3) Unplug the power cord and hang it up carefully.

Lint/Chip Filter Cleaning

After each wash cycle, please clean the lint/chip filter by:

- 1) Locate the lint filter in the wash tub (6)
- 2) Pull the lint filter cover open – it opens at the top & pull forward
- 3) Remove the lint filter material & wash it under running water
- 4) Replace the lint filter material to the cover
- 5) Re-insert the lint filter cover back in the wash tub (6) – clip the bottom first, then close from the top.

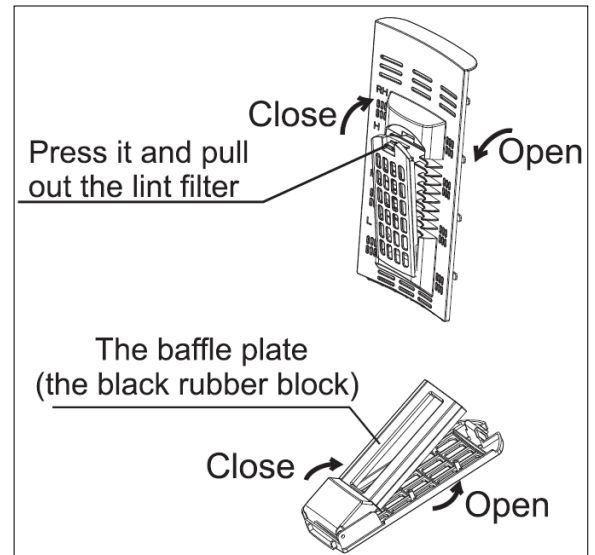

Wipe the outside of outer housing (15) with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners, harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

Refit the parts following the assembly instructions

TROUBLESHOOTING

| Phenomena | Reason |
|--|---|
| The washing machine do not work | Power cut? Plug is not inserted tightly? Something impede pulsator? |
| It does not drain | Drainpipe is bended or get blocked? |
| Noise during washing | Hard items put into the washing tub? |
| Noise and strenuous vibration | The machine is balanced? Too much laundries? The clothes is put rightly? |
| Some water in the drain hose and the machine | The remaining water when the factory make test which is a normal phenomenon |
| Drop of water on the surface of tub | It is normal when environment temperature is higher than the normal water temperature. |
| The water cannot be stored | If there are some hard items remained in the drain valve? If water level of Washing tub exceed overflow level? |

SERVICE & CUSTOMER CARE





There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts

Please contact Binatone Customer Service at:

| | | |
|--|---|---|
|  | <p>www.binatonelifestyle.com/binatone/customer-service</p> <p>L</p> |  |
|  | <p>www.facebook.com/BinatoneAfrica</p> <p>or search @BinatoneAfrica in Facebook or Messenger to find this page easily.</p> |  |

Have your model number & batch code ready – it is located on the rating label on your product

WARRANTY



Save your proof of purchase sales receipt.

BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this
instruction manual responsibly**

Binatone Lifestyle Appliances

• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •