

ENGLISH

 **Binatone**
Simply better

FLAT SCREEN SMART LED TV



HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

To get the best results from your Binatone product
please read these instructions carefully.

BTVS-32HDT2S2 / BTVS-43FHDT2S2

BTVS-504KT2S2 / BTVS-554KT2S2

BTVS-654KT2S2 / BTVS-754KT2S2



Binatone has an incredible heritage.

Established – 1958 in London, UK.

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:



www.binatonelifestyle.com



 
IMPORTANT SAFEGUARDS

When using electrical appliances – basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Do not modify or repair the appliance yourself. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ To protect against electric shock, do not expose the appliance to rain or moisture.
- ✓ Do not pull, twist or otherwise abuse the power cord.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, result in serious personal injuries as well as damage to the TV. Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson.
- ✓ Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation for the TV and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit.
- ✓ This appliance should be placed away from heat sources, such as radiators, stoves and other room heaters.
- ✓ The use of accessories not included, recommended, or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.
- ✓ Position the appliance and the cord so that nobody can accidentally overturn it.
- ✓ Do not use the appliance if it has mechanical defects (dents, cracks etc). Get it checked by the nearest authorized service centre.
- ✓ For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will protect the TV from damage due to lightning and power-line surge.
- ✓ An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. Where installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- ✓ Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- ✓ If an outside antenna or cable system is connected with the TV, be sure the antenna or cable system is grounded so as to provide protection against voltage surges and built-up static charges.


 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover(or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

SAFETY INFORMATION

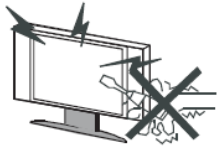

Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.

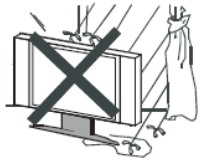


Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

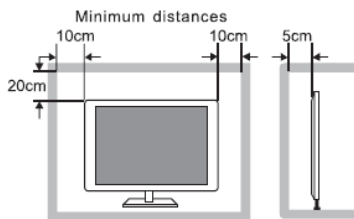

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

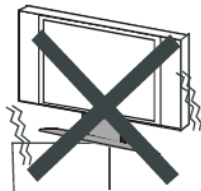

Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.

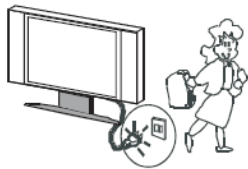

Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

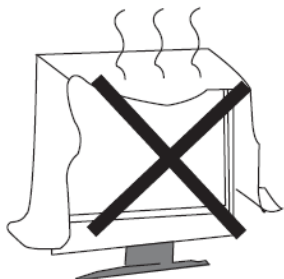

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



WARNING – SCREEN DAMAGE

Please avoid rendering fixed images on the screen for long periods. A fixed image means an image that remains static on the screen - for example, on-screen menus, black bars, and time display. If you must use fixed images, reduce their on-screen time & reduce screen contrast and brightness to avoid screen damage.

 
Static images may cause permanent damage to the TV screen.

- Do not display static images on the LCD screen for more than two hours, as this can cause ghosting. To prevent ghosting, please reduce the brightness and contrast of the screen.
- Watching TV in 4:3 format for a long time may leave marks on the left and right edges of the screen and the border of the image. Avoid using this mode for a long time.
- Long-term display of static images in videos and games or computers can cause some blurring and ghosting due to screen burn.

Please correspondingly reduce the screen brightness and contrast when using the TV set in this way. The ghosting, partial ghosting and other traces displayed on the TV screen for the above reasons are not within the scope of this warranty.

SPECIFICATION

Model Number Details:

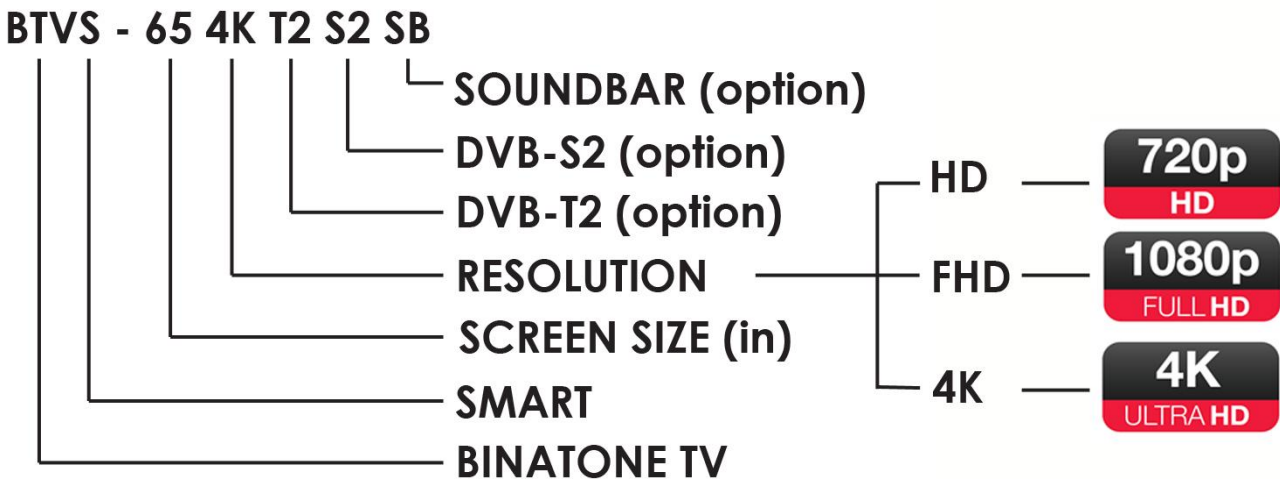

Voltage: 100-240V~ 50/60Hz
Aspect Ratio: 16:9
Analogue System: PAL/SECAM BG/DK/I
Base Impedance: 75Ω (unbalanced)
Digital System:



KNOW YOUR APPLIANCE

Controls on TV (rear edge)

BUTTON NAME	BUTTON ICON TYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+				To increase the sound volume level
VOLUME DOWN BUTTON	VOL-				To decrease the sound volume level
PROGRAM UP BUTTON	CH+				To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-				To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.




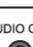



























Controls are on rear of TV, either on left or right side (depends on model)

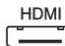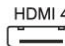CONNECTIONS (reference)

PORT NAME	PORTS ICON TYPE		PORT INSTRUCTION
AV IN	1		AV input port
	2		
	3		
	4		
COMPONENT IN	1		YPbPr signal input port
	2		
AV OUT	1		AV output port
	2		
TERMINAL ANTENNA (75 OHM)			TV signal input port
TERMINAL ANTENNA (75 OHM)			Satellite signal input port

CONNECTIONS (reference) continued

PORT NAME	PORTS ICON TYPE		PORT INSTRUCTION
VIDEO OUT	VIDEO OUT 		Video output port
OPTICAL OUT	OPTICAL 		Optical output port
COAXIAL OUT	COAXIAL 		Coaxial output port
AUDIO OUT	AUDIO OUT 		Audio output port
LINE OUT	LINE OUT 		Audio output port
EARPHONE OUT		Earphone out 	Earphone output port
VGA IN	VGA 	VGA IN 	RGB signal input port
VGA AUDIO IN	VGA AUDIO IN 	PC Audio IN 	VGA audio input port
HDMI IN	1	 	HDMI signal input port
	2	 	
	3	  	
	4	   	
USB IN	1		USB input port
	2	   	
RJ45 IN	RJ45 		RJ45 input port
AUDIO IN	AUDIO IN 		Audio input port

NOTE : Specific connection types on each model vary – some connections may not be present – please check the rear & side panel of your TV.

CONNECTIONS – INPUT/OUTPUT BY MODEL

BTVS-32HDT2S2

Connection Panel (rear lower)



Connection Panel (rear side)



BTVS-43FHDT2S2

Connection Panel (rear lower)



Connection Panel (rear side)



BTVS-554KT2S2

Connection Panel (rear lower)



Connection Panel (rear side)



BTVS-654KT2S2SB

Connection Panel (rear lower)



Connection Panel (rear side)



BTVS-754KT2S2SB

 
Connection Panel (rear lower)



Connection Panel (rear side)



Remote Control Receiver

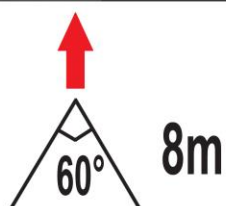


Remote Control

The remote control cannot be used unless it is within receivable range – make sure there are no obstacles between the TV and the remote.

BATTERY INSTALLATION OF REMOTE CONTROLLER

- 1) Slide open the battery compartment
- 2) Insert 2 x AAA batteries (not included)
Make sure the polarity of the battery is fitted correctly + & - follow the marks inside the remote control
- 3) Refit the battery cover and slide to lock position

 NOTE: replace fresh batteries when the remote function is not stable.

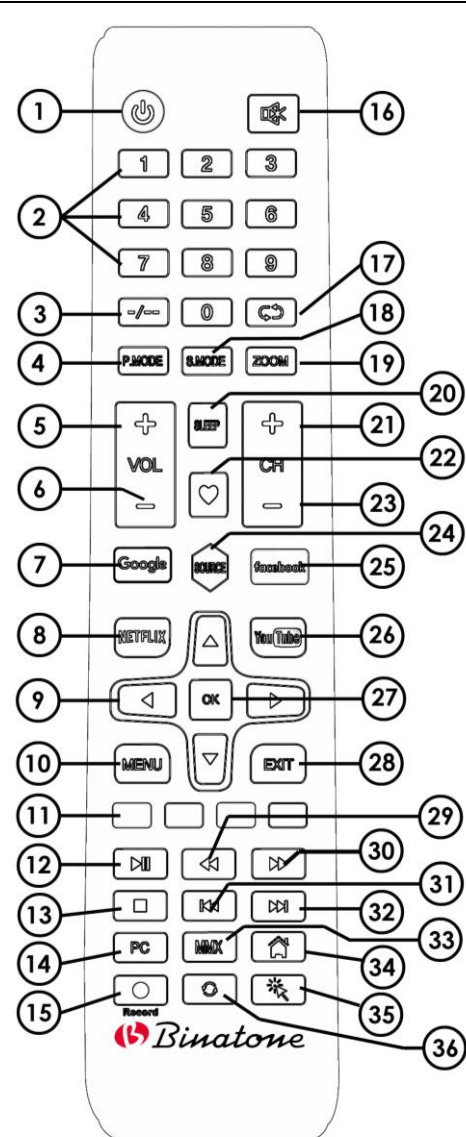

(*) Optional functions may depend on your TV source/provider.

(**) SMART TV versions only

1 POWER BUTTON

Switch the TV ON/OFF

2 NUMBER BUTTONS

Select TV channel or input password

3 +/-BUTTON

Enter a program number for multiple program channels such as 2-1, etc.

4 P. MODE BUTTON

Picture effects selection

5 VOLUME (+) BUTTON

Adjust volume up (+)

6 VOLUME (-) BUTTON

Adjust volume down (-)

7 GOOGLE BUTTON

Opens GOOGLE (**)

8 NETFLIX BUTTON

Opens NETFLIX (**)

9 UP, DOWN, LEFT & RIGHT BUTTONS (◀▶▲▼)

Directional control on screen, in menu's etc

10 MENU BUTTON

Enter or exit setup menu

11 RED/GREEN/YELLOW/BLUE BUTTONS (*)

Teletext page select buttons (*)

12 ▶ || PLAY/PAUSE BUTTON

Play / Pause

13 ■ STOP BUTTON

Stop playback

14 PC BUTTON

No Function

15 RECORD BUTTON (*)

Record PVR (*)

16 MUTE BUTTON

Switch ON/OFF the sound

17 SWITCH BACK BUTTON

Switch between current and previous channel

18 S. MODE BUTTON

Sound effects selection

19 ZOOM BUTTON

Press to zoom screen

20 SLEEP BUTTON

Press to setup TV auto turn off time

21 CHANNEL (+) BUTTON

Adjust channel up (+)

22 FAVOURITE BUTTON

23 CHANNEL (-) BUTTON

Adjust channel down (-)

24 SOURCE BUTTON

Display source menu

25 FACEBOOK BUTTON

Opens FACEBOOK (**)

26 YOUTUBE BUTTON

Opens YOUTUBE (**)

27 OK BUTTON

Press to confirm or enter sub menus

28 EXIT BUTTON

Press to leave a menu

29 ◀ SKIP (Backwards)

Skip scene or music

30 ▶ SKIP (Forwards)

Skip scene or music

31 ◀◀ BACK BUTTON

Go back to previous

32 ▶▶ FORWARD BUTTON

Go forward to next

33 MMX BUTTON (*)

Maximize display

34 HOME BUTTON

Record PVR (*)

35 MOUSE BUTTON

Enables mouse mode control

36 REPEAT BUTTON

Repeat A-B program

(*) Optional functions may depend on your TV source/provider

BEFORE FIRST USE

Carefully remove all packaging from the appliance and its accessories. Wipe the appliance to remove any dust as described in the “CARE AND CLEANING” section.

Assemble the product following the setup & operating instructions below.

 
Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.


OPERATING INSTRUCTIONS

SELECT INPUT SOURCE

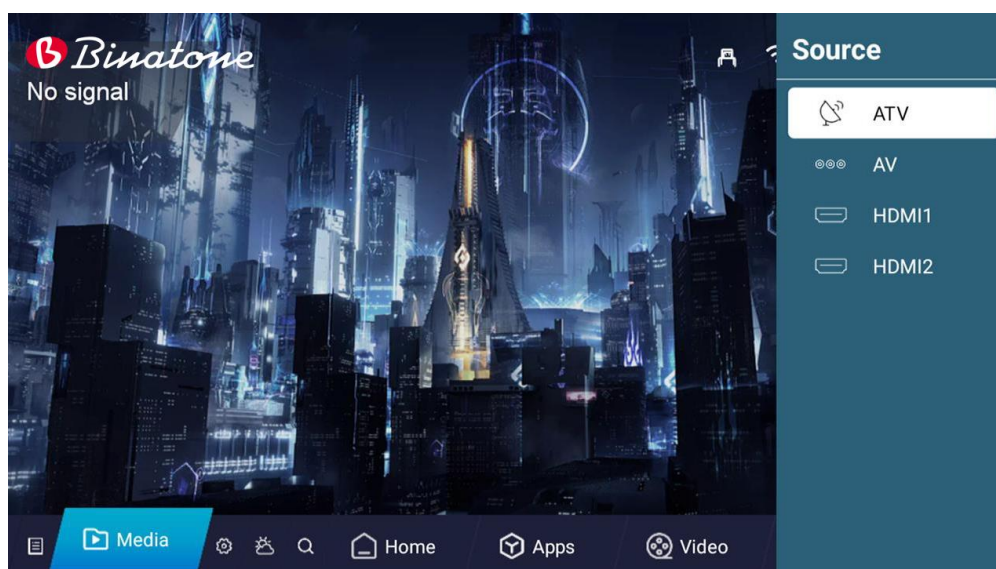

Move to the MEDIA tab on bottom edge using the ◀/▶ button.
Press **SOURCE** button to display the input source input list.
Press ▲/▼ button to select the input source you want to watch
Press **ENTER** button to select & enter the input source

 MAIN MENU

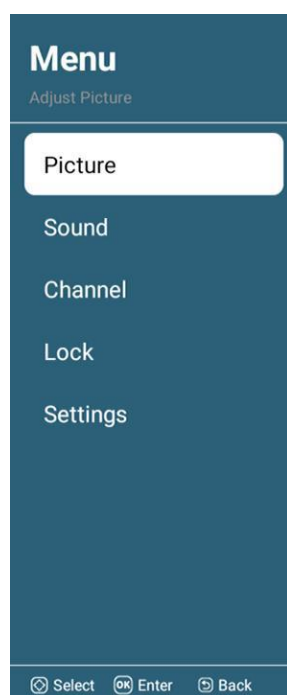

- Press **MENU** button to display the MAIN OSD MENU
- Press ▲/▼ button to select the MENU you want
- Press **ENTER** button to enter the sub menu, and press **EXIT** button to return back to the previous menu.
- Press ▲/▼ button to select the option and then press ENTER button or ▶ button to enter the submenu, press ◀/▶ button to adjust the value or press ◀/▶ button to select in the sub menu
- You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

 
Program information prompt

The picture is for a reference only; the actual item is the standard.

Press the **INFO** button to open the information of the currently playing program in the upper right corner (as shown below)



Picture Menu

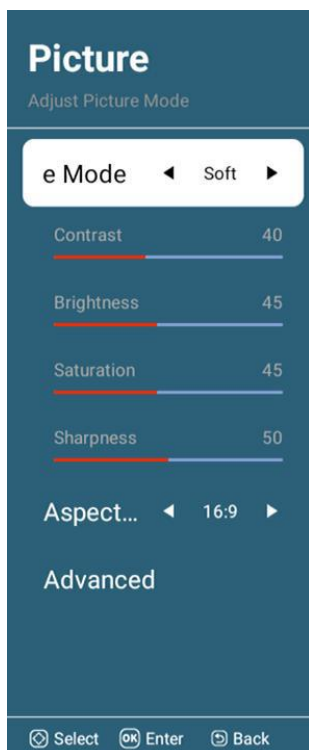

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **Picture** in the main menu, and then press **ENTER** button to enter.

- 1) Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **▶** button to enter.
- 2) Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
- 3) After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

Picture Mode

Press **▲/▼** button to select Picture Mode, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User, Standard, Dynamic, Mild)

You only can change the value of brightness, contrast, sharpness, colour, when the picture is in User mode.

 


TIPS: You can press **◀/▶** button on the remote control again and again to change the picture mode directly.

Aspect Ratio

Press ▲/▼ button to select Aspect Ratio, press ◀/▶ button to Adjustable options are 16:9, 4:3, Point to Point, Zoom1, Zoom2.

Advanced

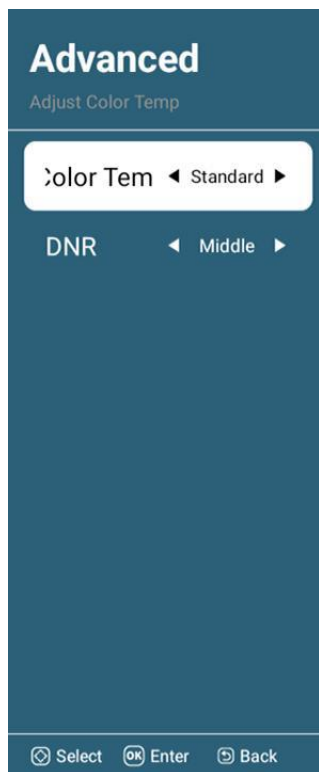

□

 
- Colour Temp

Press ▲/▼ button to select Colour Temp, then press **ENTER** button to enter and ◀/▶ button to select Standard, Cool, Warm.

- DNR

Press ▲/▼ button to select **DNR**, and then press **ENTER** button to enter and ◀/▶ button to select Off, Low, Middle, High

Sound Menu

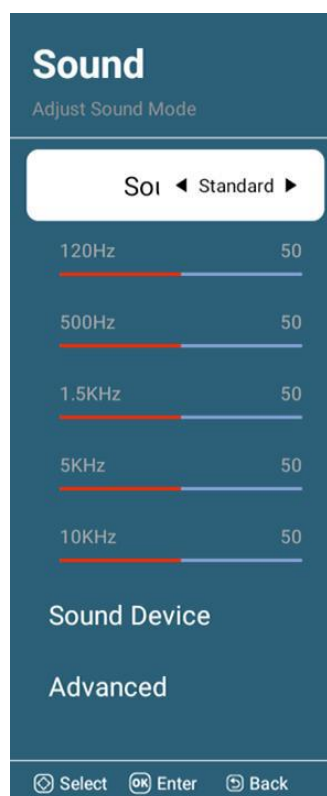

Press **MENU** button to display the main menu.

Press ▲/▼ button to select Sound in the main menu, and then press ENTER button or ▶ button to enter.

1. Press ▲/▼ button to select the option that you want to adjust in the Sound menu, then press **ENTER** button to enter.

2. press ◀/▶ button to adjust or press ▲/▼ to select, and press **ENTER** button to select submenu.

3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu or press **EXIT** button to exit the entire menu.

Sound mode

Press ▲/▼ button to select Sound mode, and then press **ENTER** button to enter. And then press ◀/▶ button to select. (Available Sound mode: Standard, News, Music, Movie).

TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.



Sound Device

 
Press ▲/▼ button to select SoundDevice, then press **ENTER** button to enter and Press ◀/▶ button to select Speaker, SPDIF, ARC, Earphone, BT Then press **MENU** button to return back the previous menu directly.



Surround

Press ▲/▼ button to select surround, then press ENTER button to enter and press ◀/▶ button to adjust.

Advanced

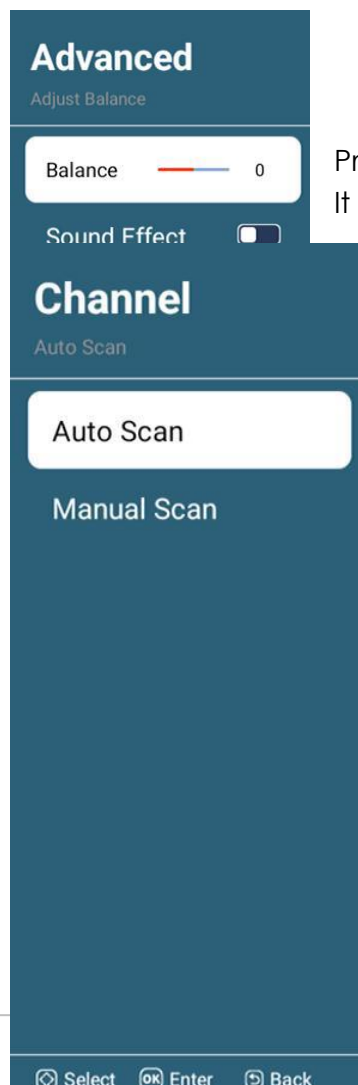

Press ▲/▼ button to select Balance, Bass, Treble, AVL. It can only be adjusted under user mode

Then press MENU button to return back the previous menu directly.

Channel Menu

Press **MENU** button to display the main menu.

 
Press **▲/▼** button to select setup in the main menu, then press **ENTER** to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Channel menu, then press **ENTER** or **▶** button to enter.

2. Press **◀/▶** button to adjust or press **▲/▼** button to select.


After finishing your adjustment, press **MENU** button to save and return back.

Auto Tuning

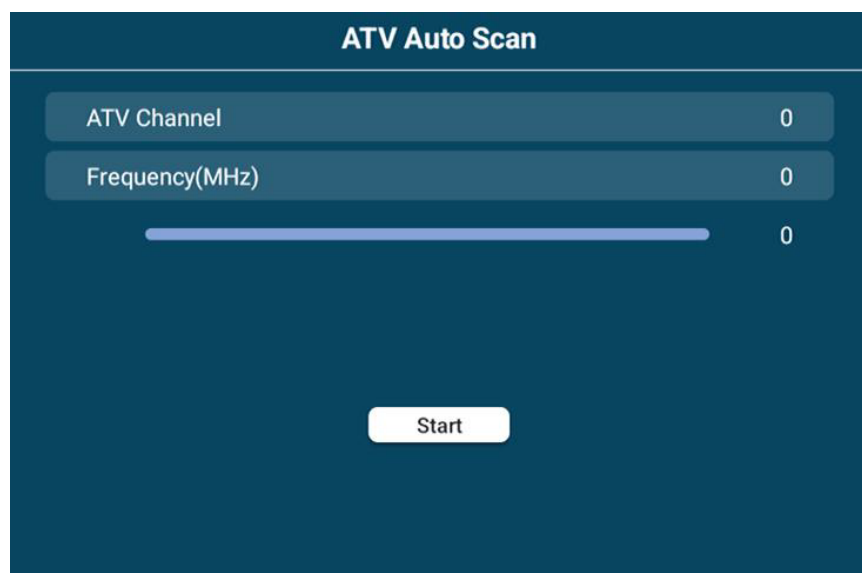

Press **◀/▶** button to select Auto Search, and then press **ENTER** button to enter.

 Select **OK** to search.

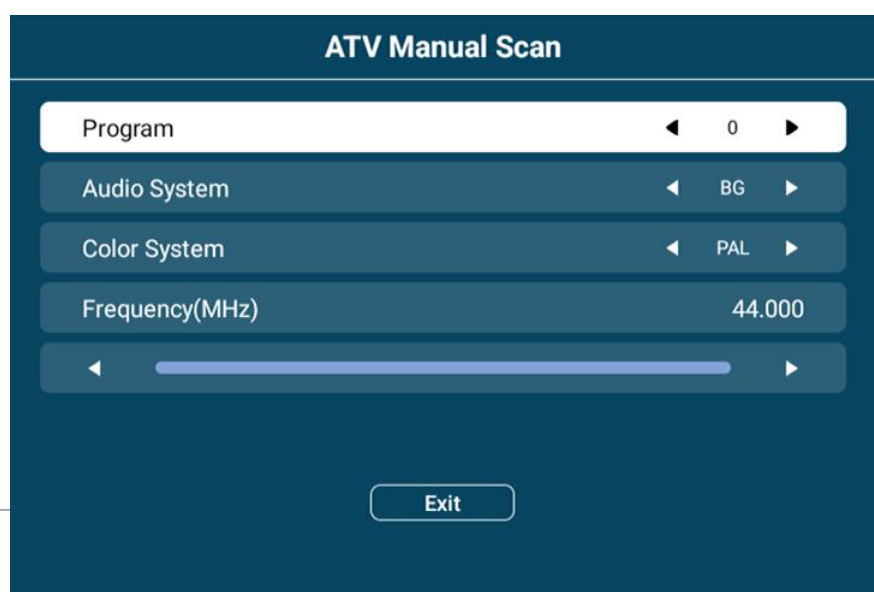

Manual Tuning

Press ◀/▶ button to select Manual Tuning, and then press **ENTER** button to enter.

 
 
Select Start Scan to search.

Channel Edit



Press ◀/▶ button to select Channel Edit, and then press ENTER button to play the channel selected.


Lock

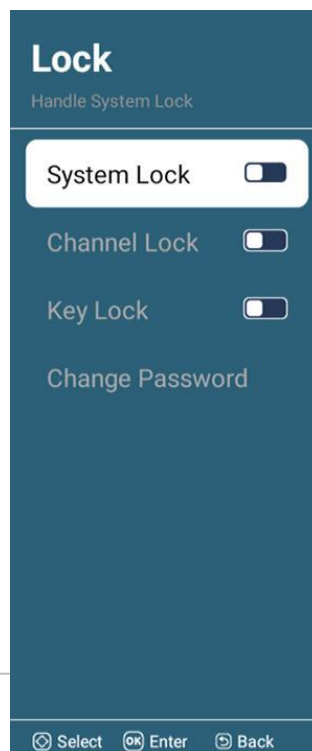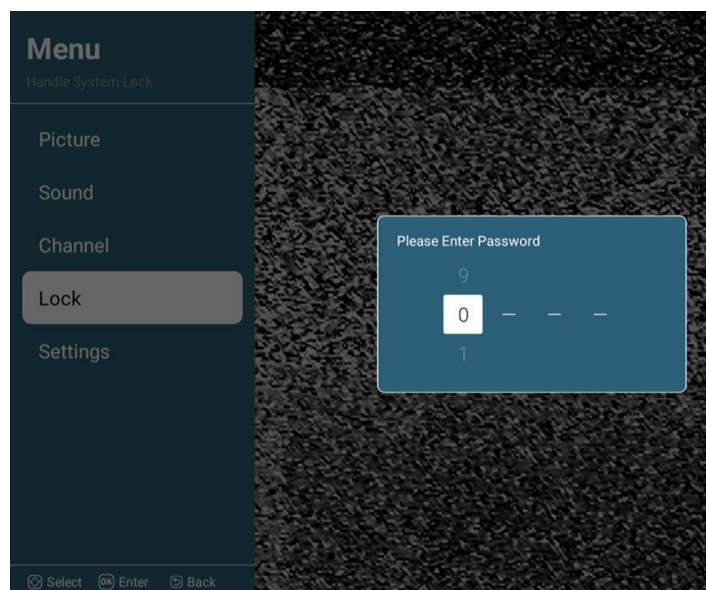

Enter the password to lock the menu, the original default password is "0000"

Press ▲/▼ button to select System Lock, Channel Lock, Key Lock, Change Password. Then press **MENU** button to return back the previous menu directly.

 Setting Menu

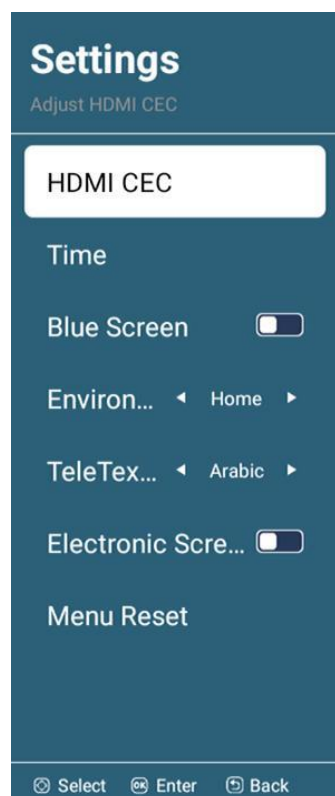


Press **MENU** button to display the main menu.

Press ▲/▼ button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

1. Press ▲/▼ button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press ◀/▶ button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

 
HDMI CEC

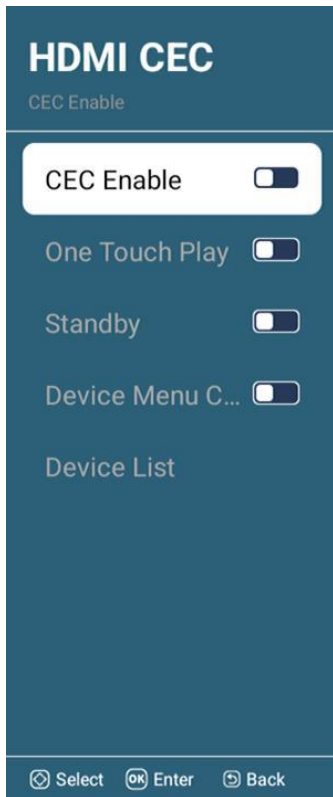

HDMI Mode

Press ▲/▼ button to select Location, and then press ◀/▶ to select to Video, Auto, PC.

 Time

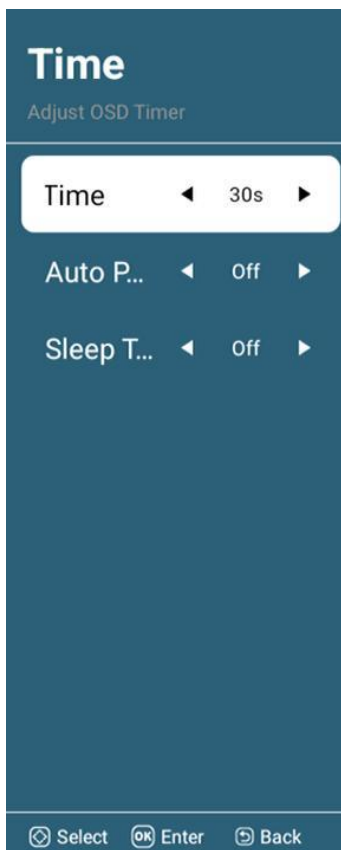

Blue Screen

Press ▲/▼ button to select **Reset TV**

Environment

Press ▲/▼ button to select to Store,Home.

Menu Reset

 
Restore menu to default.

Home


Apps

The picture is for a reference only; the actual item is the standard.


Press ▲/▼ button to select **Apps** in the **Source Menu**, and then press **ENTER** or ► to enter.

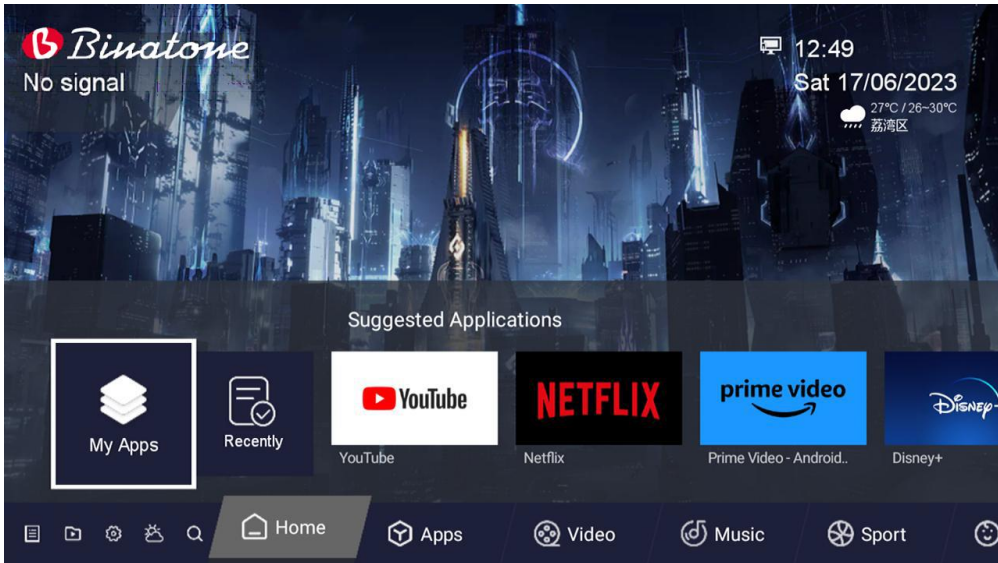

 
You can button to select App Store to download apps what you want, As the figure shows.

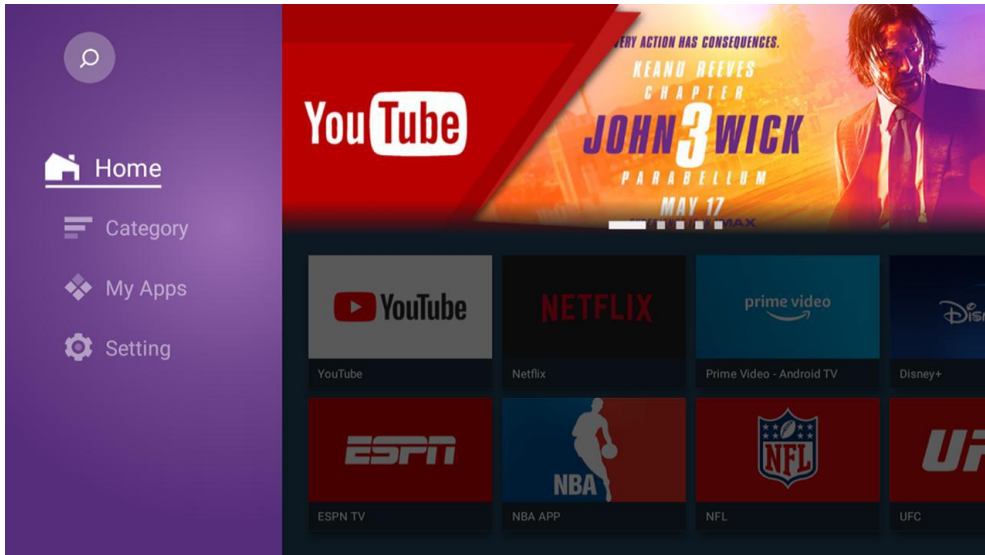

 Press ▲/▼ button to select TV in the MY APPS Menu, and then press **ENTER** or ► to enter.

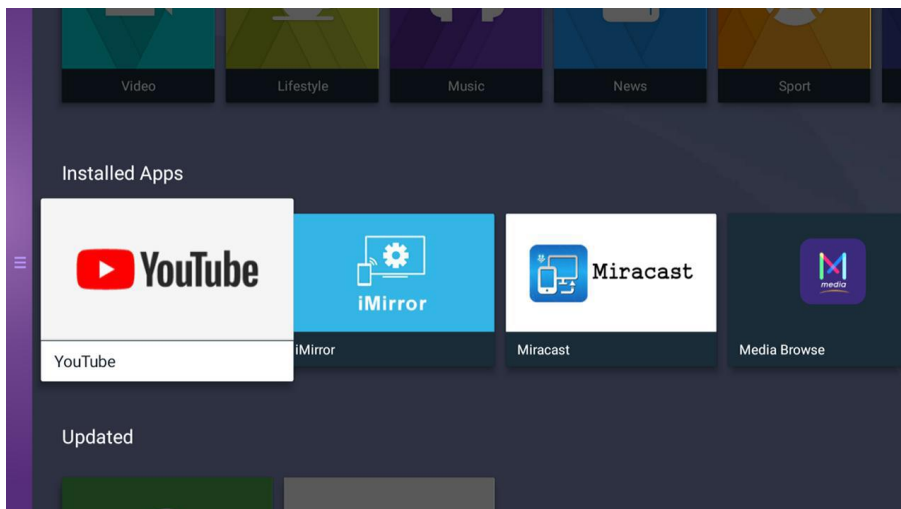

Browser

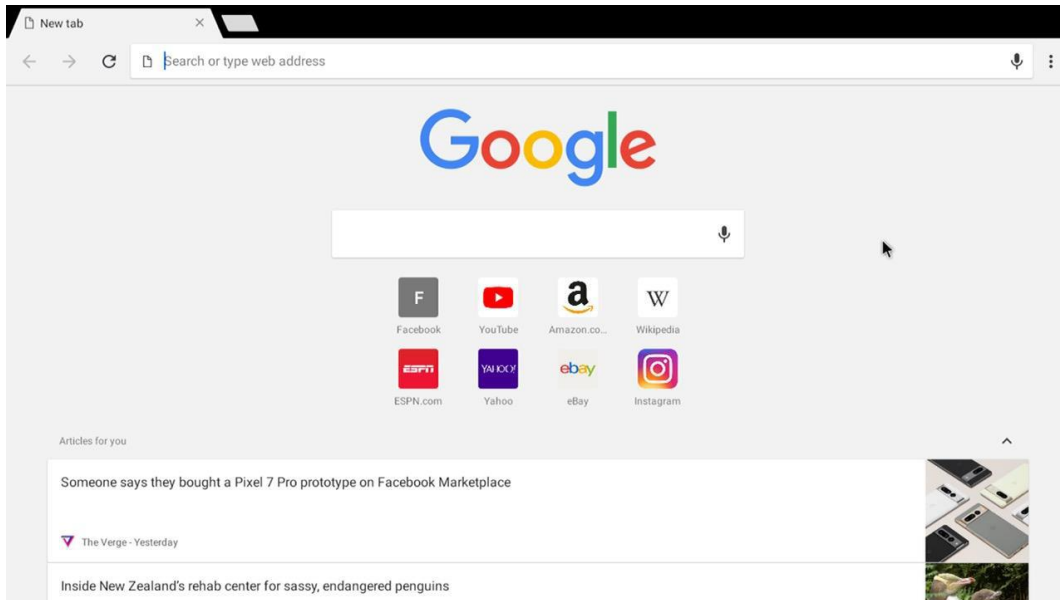 

Virtual mouse

In virtual mouse mode, double-click the same direction key to enter scroll wheel mode. Immediately press and hold the same direction key to scroll.

 
After entering the scroll wheel mode, if you do not long press the direction key, it will automatically exit the scroll wheel mode after 0.3 seconds. After exiting the scroll wheel mode, long press the direction key again, the content cannot be scrolled.

The specific operations are as follows:

- Double-click the ▲ key to enter the scroll wheel mode, then long press the ▲ key within 0.3 seconds, the content will scroll up.
- Double-click the ▼ key to enter the scroll wheel mode, then long press the ▼ key within 0.3 seconds, the content will scroll down.
- Double-click the ◀ key to enter the scroll wheel mode, then long press the ◀ key within 0.3 seconds, the content will scroll to the left.
- Double-click the ▶ key to enter the scroll wheel mode, then long press the ▶ key within 0.3 seconds, the content will scroll to the right.


Media Operation

Press ▲/▼ button to select MEDIA Browse in the MY APPS, and then press ENTER to enter.

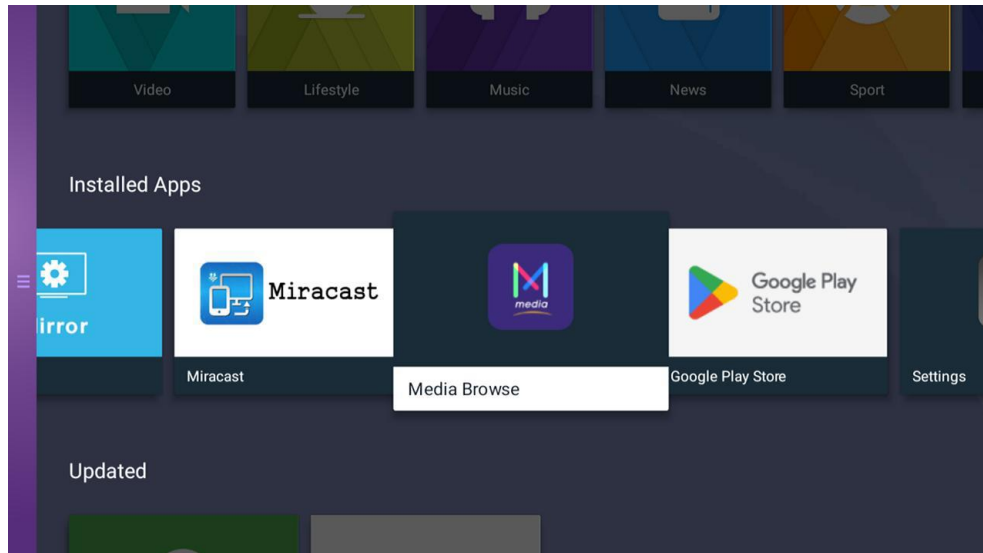


Note: Before operation **MEDIA Browse**, Plug in USB device or memory card, then press **MEDIA** button to enter the **Media Browse** on the remote control.

 You can also enter the Media Browse by pressing MEDIA button on the remote control.

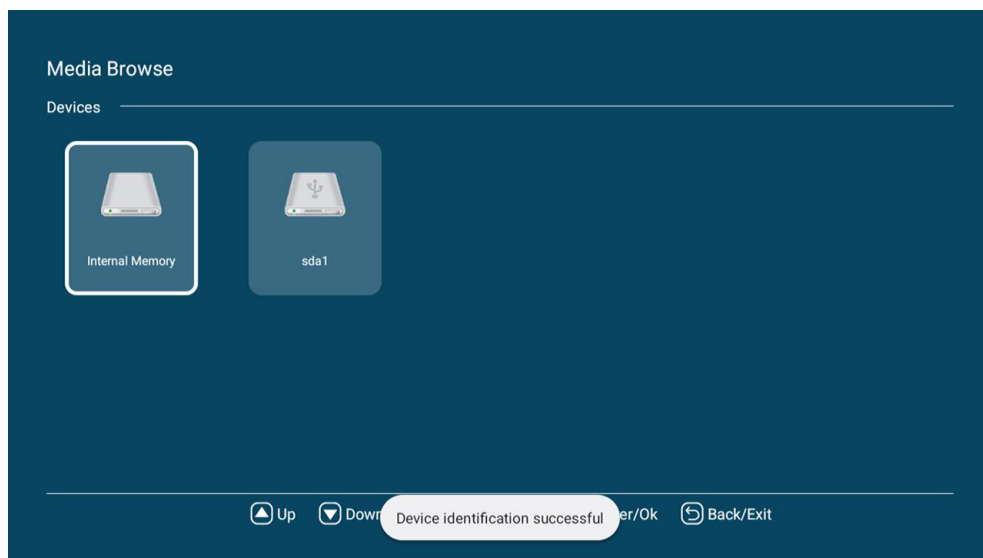

Photo

 Press ▲/▼ button to select **Photos** in the drop down box, and then press **ENTER** button to enter. Press **EXIT** button to return back to the Device interface.

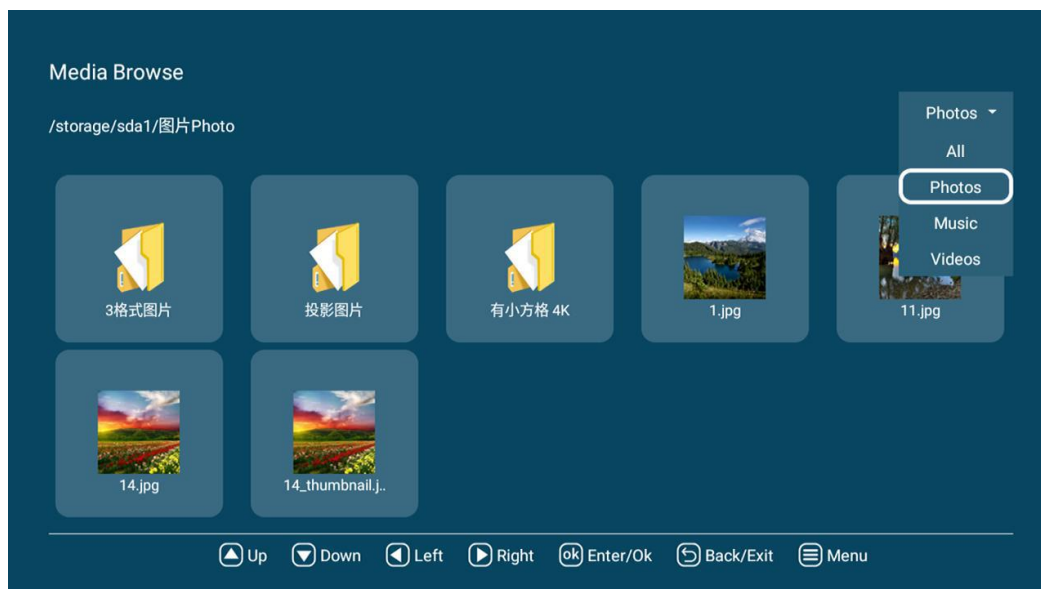


Press ▲/▼ button or ◀/▶ button to select the folder that you want to **Photos** . Press ENTER button to select the sub folder.

You can see the information of the current playing photo after press **INFO** button, then press ▶|| button to play or pause, you can see the playing state in the right.

Then press ▲/▼ or ◀/▶ button to rotate the picture.

 
Notes: Other menu and description are the same as that for Videos menu.

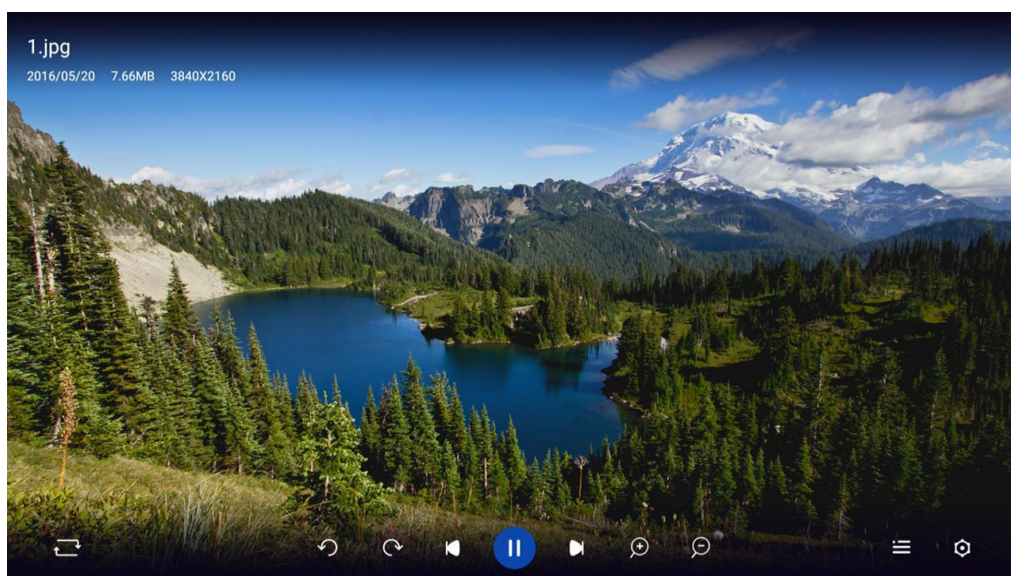

Music

Press ▲/▼ button to select **Music** in the drop down box, and then press **ENTER** button to enter. Press **EXIT** button to return back to the Device interface.

 
Press ▲/▼ button or ◀/▶ button to select the folder that you want to music. Press **ENTER** button to select the sub folder.

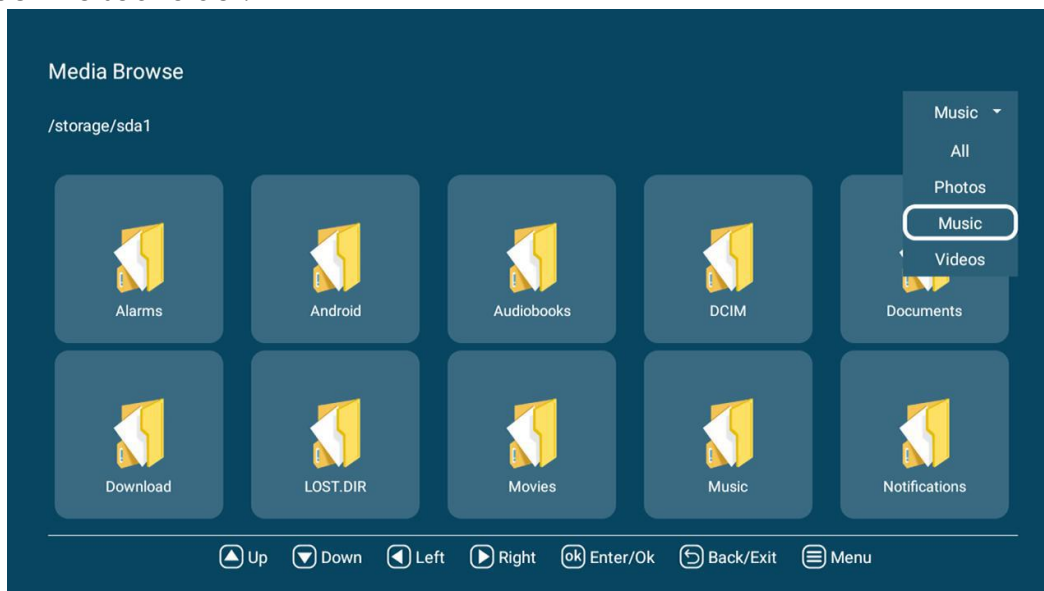

Videos


Press ▲/▼ button to select **Videos** in the drop down box, and then press **ENTER** button to enter. Press **EXIT** button to return back to the Device interface.

 Press ▲/▼ button or ◀/▶ button to select the folder that you want to videos. Press **ENTER** button to select the sub folder.

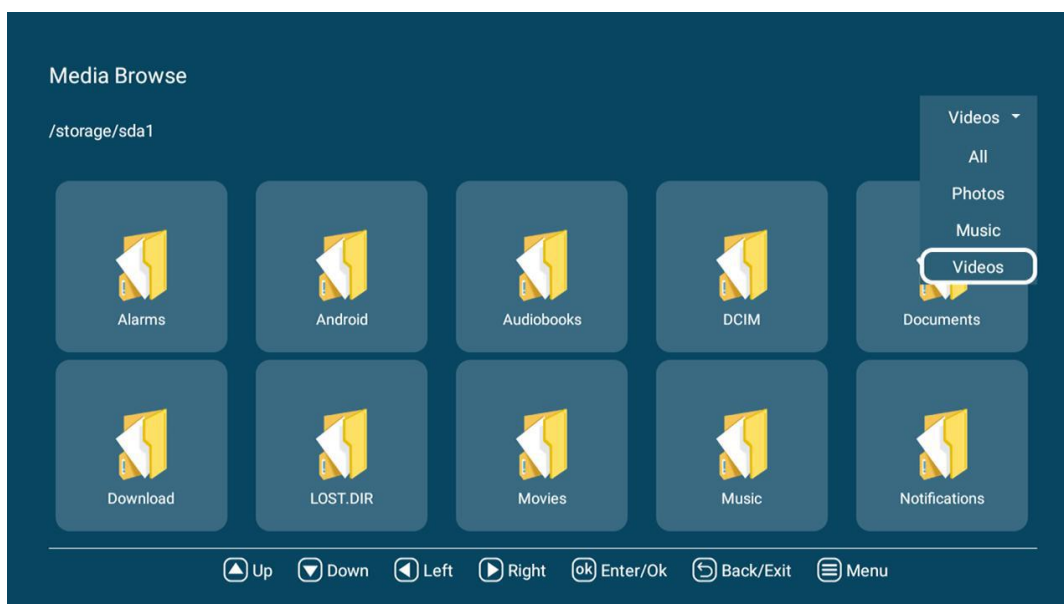

Setting

 Select **SETTING** then press **ENTER** or **▶** to enter.




Network Setting


The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Network Setting** in the main menu, then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu

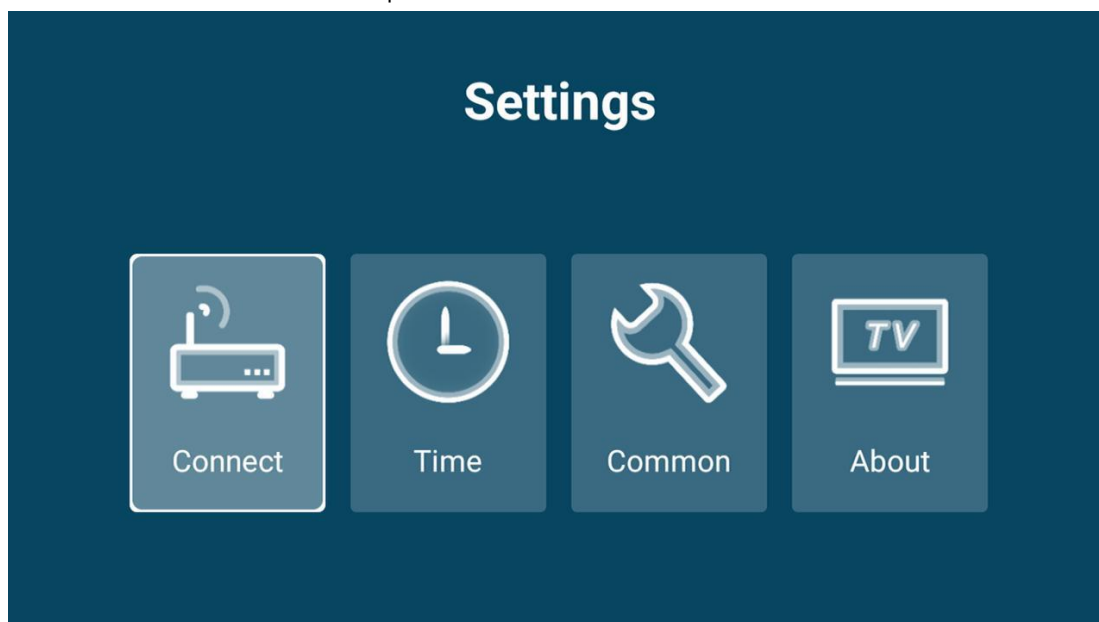


 Press **▲/▼** button to select the **Network Setting** that you can open the Wi-Fi.
As the figure shows.

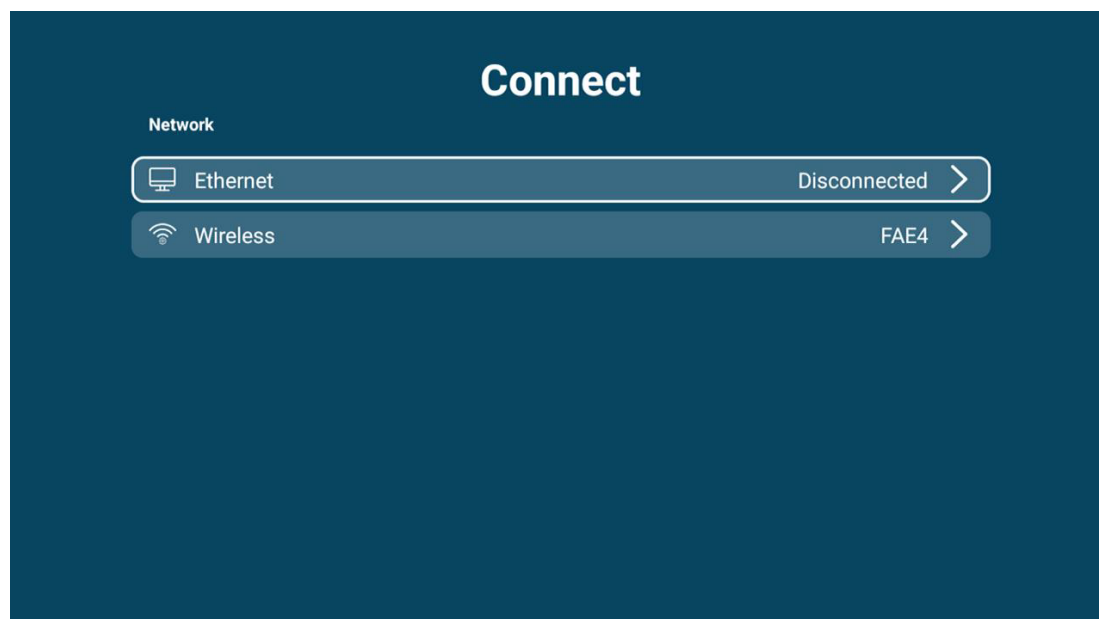


Time Setting

 Press ▲/▼ button to select the **Time Setting**. As the figure shows.

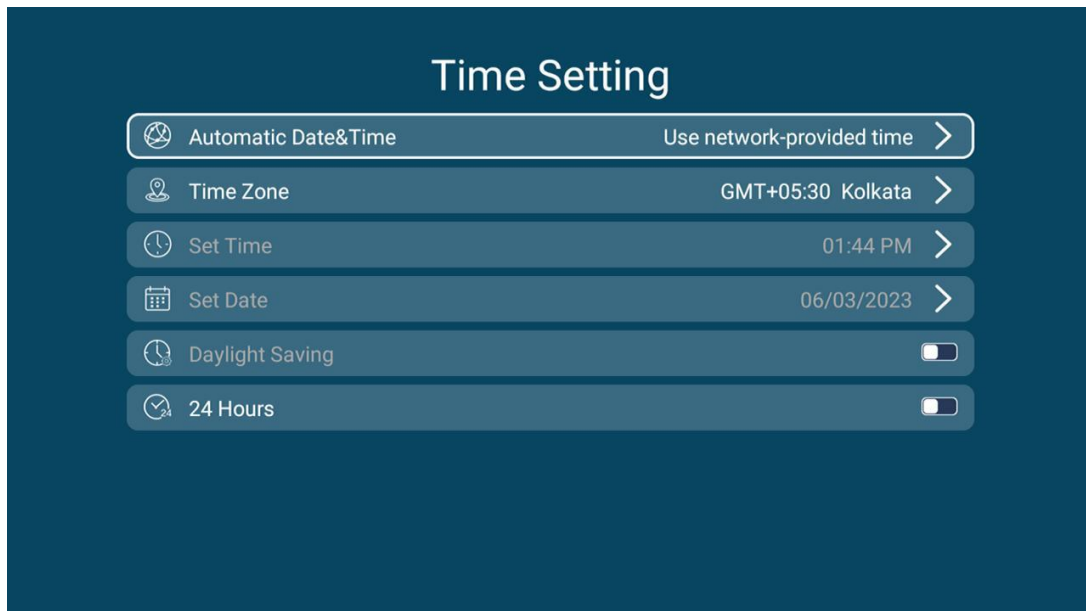


Common

 Press ▲/▼ button to select , As the figure shows

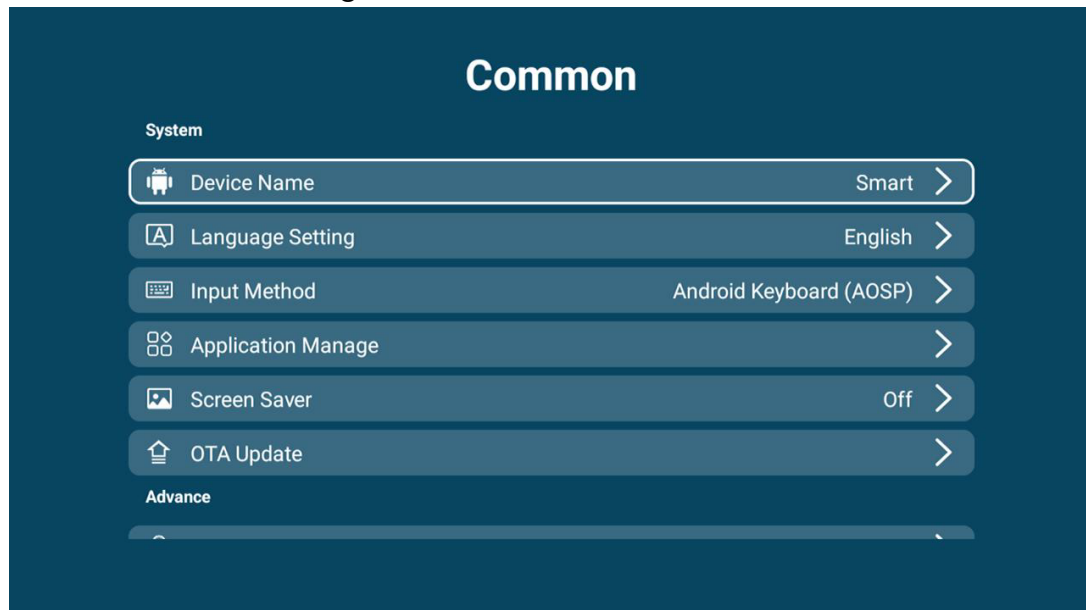


Language Setting

 Press ▲/▼ button to select the **Language** that you want. As the figure shows.

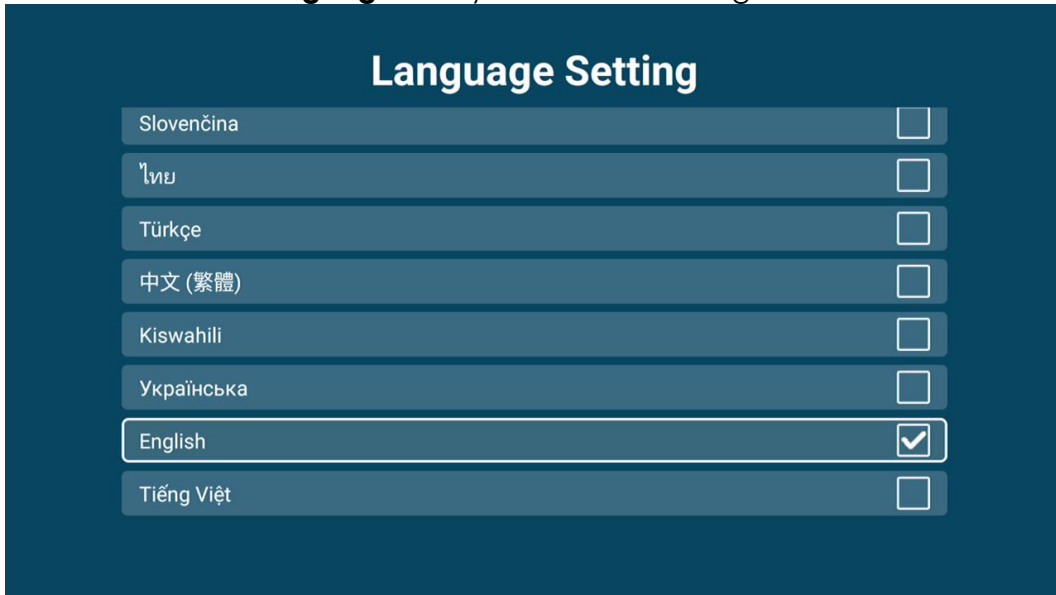


Application Manage

 Press ◀/▶ button to select **Application Manage** that you can know how many apps you have downloaded and this feature you also can unload the app. As the figure shows.

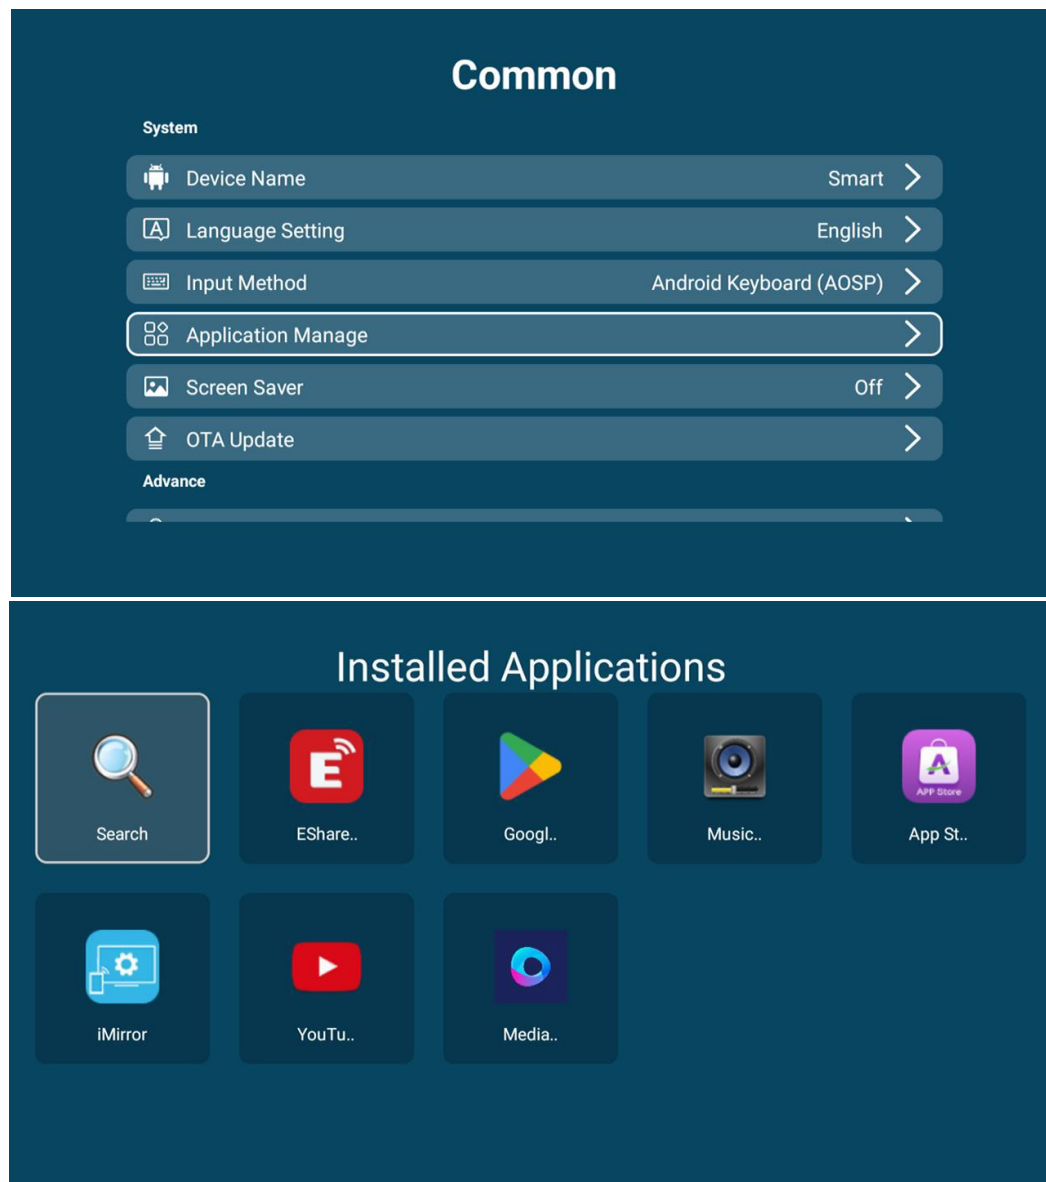


System Recovery

 Press ◀/▶ button to select **System Recovery** that you can reset the system.

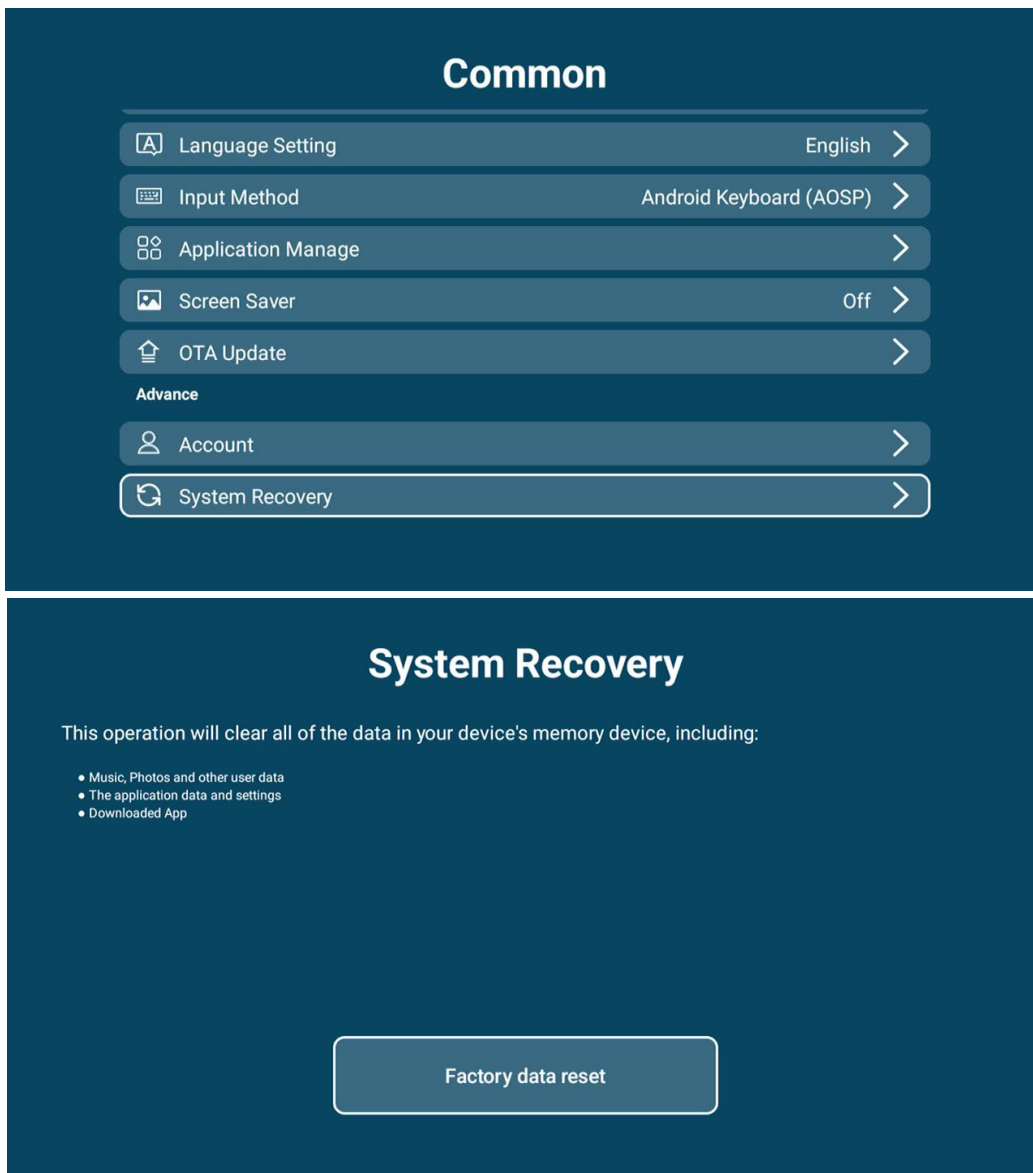

About TV

 Press ◀/▶ button to select the **About TV** that you can find the information about TV.
As the figure shows.

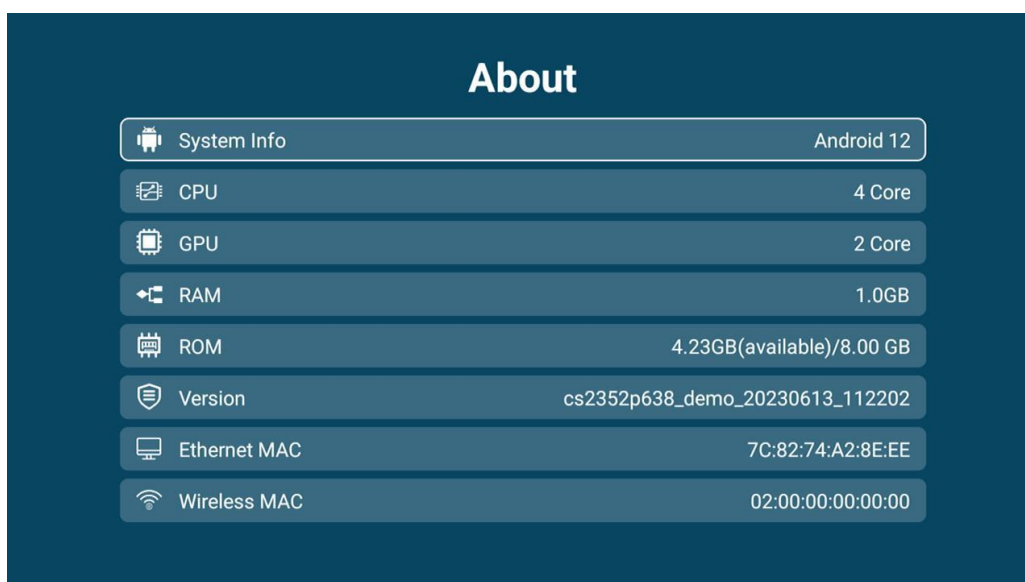

TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

If the problem persists, unplug your unit and contact your dealer.

SYMPTOM	METHODS OF CHECKING OR ADJUSTING
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	Check that TV set power is ON. Check batteries are operational and inserted correctly. Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	Ensure SOURCE switch is set to TV. Check aerial location and connection. Re-check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

Note: External rooftop/antenna adjustment should be left to a suitably qualified person.

CARE AND CLEANING

Unplug the TV from the wall outlet before cleaning.

Use a slightly damp, soft cloth to clean the TV set and its frame. Do not use such substances as alcohol, chemicals or household cleaners to clean the TV set.

TV screen may be damaged -do not use items to touch, push, rub or strike the screen.

SERVICE & CUSTOMER CARE

There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts

Please contact Binatone Customer Service at:

	<p>www.binatonelifestyle.com/binatone/customer-service/</p>	
	<p>www.facebook.com/BinatoneAfrica or search @BinatoneAfrica in Facebook or Messenger to find this page easily.</p>	

Have your model number & batch code ready – it is located on the rating label on your product

WARRANTY

Save your proof of purchase sales receipt.

BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this
instruction manual responsibly**

Binatone Lifestyle Appliances

• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •