



DRY IRON

DI-1266



To get the best results from your Binatone product please read these instructions carefully.

**Binatone has an incredible heritage.
Established – 1958 in London, UK.**

We are an absolutely customer centric company! With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

www.binatonelifestyle.com



IMPORTANT SAFEGUARDS

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Do not modify or repair the appliance yourself. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ This product is intended for domestic indoor use only. Do not use outdoors or for commercial purposes.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ Do not pull, twist or otherwise abuse the power cord. Never pull the cord to disconnect the appliance, instead grasp the plug and pull it to disconnect.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ The use of accessory attachments not included, recommended, or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.
- ✓ To avoid a circuit overload, do not operate any other high voltage equipment on the same circuit.
- ✓ Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, moving, cleaning and storing it.
- ✓ Do not let the power cord hang over the edge of your table or counter, and do not allow the power cord or the appliance to come in contact with hot surfaces.
- ✓ Position the appliance and the cord so that nobody can accidentally overturn it.
- ✓ Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- ✓ Do not cover the appliance whilst it is hot or in use.
- ✓ Do not use the appliance if it has mechanical defects (dents, cracks etc.). Get it checked by the nearest authorized service centre.


SPECIFICATION

Voltage: 220-240V~ 50/60Hz

This Dry Iron is intended for ironing of different fabrics. It is only to be used for household purposes and is not meant for commercial or industrial use. Not to be used outdoors.

Power: 1100-1300W
Soleplate: Non-stick coating

KNOW YOUR APPLIANCE

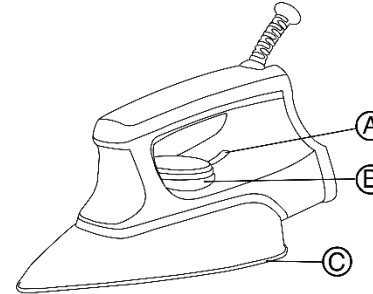

- A. Indicator light
- B. Temperature Control Dial
- C. Soleplate

BEFORE FIRST USE

- Remove all packing materials from the appliance and its accessories. Clean the soleplate with a soft cloth. Iron a clean old piece of cotton cloth to make sure the soleplate and the water tank are absolutely clean.
- Always make sure the temperature control dial in "MIN" position before plugging in or after each ironing.
- Always place the iron in a vertical position when it is left unattended or when storing.
- The iron must be used and rested on a stable surface.
Note: Light smoke emission may occur during the first use of the appliance. It is a normal occurrence that will soon disappear.

SPECIAL SAFETY MEASURES

- ✓ The iron must not be left unattended while it is connected to the supply mains.
- ✓ Always disconnect the iron from the mains when filling or draining the water tank.
- ✓ Do not leave the hot iron in a horizontal position. Place it upright on a heat resistant surface.
- ✓ The iron gets hot when in operation and retains heat for some time after turning off. Any skin contact with metal surfaces and soleplate may result in burns. Extreme caution must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.
- ✓ Never iron articles being worn by a person.
- ✓ Avoid any contacts between the soleplate and plastic fittings of an article: buttons, zippers, labels, etc. These items may scratch and damage the soleplate coating.
- ✓ The iron should always be connected to a grounded main electricity supply.
- ✓ Always let the iron cool down completely when it is not in use, when filling it with water or pouring out water, and while storing it.

OPERATING INSTRUCTIONS

1. Place the iron into a vertical position.
2. Insert the power plug into the mains supply outlet.
3. Turn the temperature control dial to set the temperature according to the garment label. The indicator light will turn on indicating the iron is being heated. When the set temperature level is reached, the indicator light will turn off and the iron is ready to use.

Note: During operation, the indicator will light up and turn off periodically. This is normal and not a malfunction.

4. If the garment label is missing, and the type of material is known, follow the recommendations below:

Fabric	Temperature Control	Temperature
Synthetic	•	Low
Silk Wool	••	Medium
Cotton Linen	•••	High

Note: If the fabric consists of various kinds of fibres, always select the lowest ironing temperature of the composition of those fibres.

5. Once ironing is finished, always turn the temperature control dial to "MIN" and unplug the appliance.

Operating Tips

Selection of temperature settings

- Before ironing, we recommend that you organize your clothes, based on their types of material and the recommended temperature settings.
- We recommend that you start ironing articles that require lower temperature settings first: the iron heats up quicker than it cools down.
- When ironing articles made with a combination of fibres, start with the temperature recommended for the most delicate material first (for example, to iron a cloth made of cotton and polyester select the temperature recommended for ironing polyester first).
- If you do not know the fabric type, find a place on the article which will not be seen and test ironing it to select the appropriate temperature, start with the minimum setting.

Ironing of selected fabrics

- Wool, velour, velvet, and similar pile fabrics must be ironed on the inside.
- To prevent shiny marks on the fabric we recommend that you iron woollen articles through a thin cotton cloth and set the steam control to the maximum position.
- Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.
- To avoid marking velvet garments shiny, iron it in one direction (following the fibre) and do not press down on the iron.
- Many fabrics are easier to iron if they are not completely dry. For example, silk should always be ironed damp.

CARE AND CLEANING

- Always unplug and let the appliance cool down before cleaning and storage.
- Make sure that any cleaning necessary is carried out only when the iron has completely cooled down.
- Do not immerse the iron in water.

Cleaning of the iron

Clean the upper part of the iron with a damp cloth.

Cleaning of the sole plate

Do not use any abrasive substances and materials to clean the soleplate. Wipe flakes and any other deposits off the soleplate with a damp cloth and a non-abrasive cleaning agent.

Avoid scratching the plate with steel wool or metallic objects

Storage

Before storing the iron, make sure it is disconnected from the mains supply outlet and is completely cooled down.





Store the appliance in the upright standing position after it cools down completely.

SERVICE & CUSTOMER CARE

There are no user serviceable parts inside this appliance. If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with: using your product servicing or repairs (in or out of guarantee) spare parts

Please contact Binatone Customer Service at:

	www.binatonelifestyle.com/binatone/customer-service/	
	www.facebook.com/BinatoneAfrica or search @BinatoneAfrica in Facebook or Messenger to find this page easily.	

Have your model number & batch code ready – it is located on the rating label on your product



Please consider recycling this instruction manual responsibly

WARRANTY

Save your proof of purchase sales receipt.



BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)

Binatone Lifestyle Appliances
• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •