

ENGLISH

 ***Binatone***
Simply better

445mm STAND FAN



To get the best results from your Binatone product
please read these instructions carefully.

ES-1800

Binatone has an incredible heritage.

Established – 1958 in London, UK.

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

www.binatonelifestyle.com



IMPORTANT SAFEGUARDS

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.


- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ This product is intended for domestic indoor use only. Do not use outdoors or for commercial purposes.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- ✓ Unplug from the power outlet when not in use & before cleaning.
- ✓ Do not pull, twist or otherwise abuse the power cord.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ Do not insert fingers, pencil or other articles through the slots during operation.
- ✓ The use of accessory attachments not included, recommended or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.
- ✓ Do not operate the fan in the presence of explosive and/or flammable fumes.
- ✓ Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- ✓ Do not operate if the fan housing is removed or damaged.
- ✓ Do not operate the fan without the protective front and rear grilles in position.

**WARNING. To Reduce the Risk of Fire or Electric Shock
Do Not Use This Fan with Any Solid-State Speed Control Device**

SPECIFICATION

Power: AC 230V~ 50Hz 60W

KNOW YOUR APPLIANCE

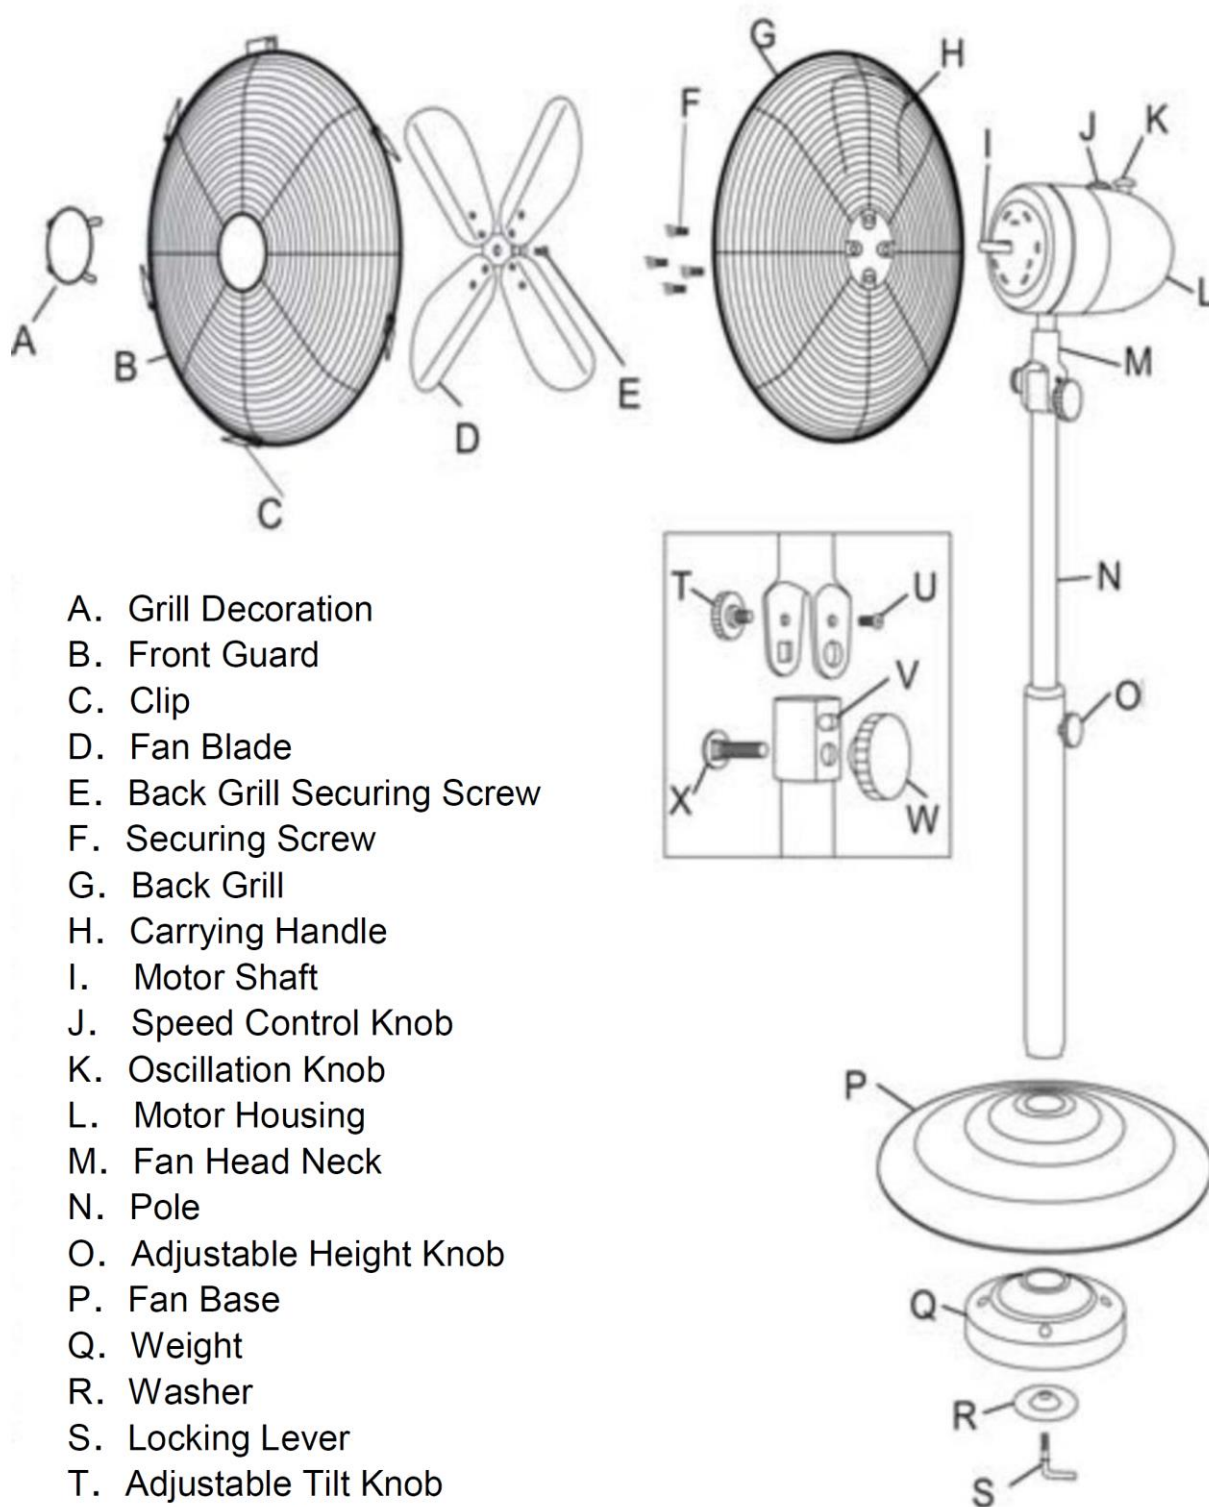

- A. Grill Decoration
- B. Front Guard
- C. Clip
- D. Fan Blade
- E. Back Grill Securing Screw
- F. Securing Screw
- G. Back Grill
- H. Carrying Handle
- I. Motor Shaft
- J. Speed Control Knob
- K. Oscillation Knob
- L. Motor Housing
- M. Fan Head Neck
- N. Pole
- O. Adjustable Height Knob
- P. Fan Base
- Q. Weight
- R. Washer
- S. Locking Lever
- T. Adjustable Tilt Knob
- U. Range of Motion Screw
- V. Range of Motion Hole
- W. Securing Knob
- X. Carriage Bolt

BEFORE FIRST USE

Carefully remove all packaging and assemble the product following the setup & operating instructions below.

SETUP INSTRUCTIONS

- 1) Unscrew the locking lever (S) out of the pole (N) in an anti-clockwise direction.
- 2) Put the pole (O) into the base (P). Place the weight (Q) & washer (R) and insert & screw the locking lever (S) firmly from the bottom of the stand in a clockwise direction.
- 3) Loosen the height adjustment knob (O) & pull out the extension tube. Tighten the height adjustment knob (O).
Caution: The height adjustment knob (O) must be fully tightened before assembling the motor section to the pedestal stand.
- 4) Remove the 4pcs screws (F) from the motor housing (L).
- 5) Fit the rear grill (G) in the proper position (H upwards) and fix the 4pcs screw (F) until tight.
- 6) Install fan blade (D) onto the motor shaft and secure with the screw (E) – ensuring it is tight.
- 7) Open clips (C) on the rim of front grill (B) and place front grill (B) onto rear grill (G).
- 8) Close the clips (C) to secure the grills together
- 9) Add front cap (A) to front grill (B)
- 10) Fit the motor section to the pedestal stand – attaching fan head neck (M) to the top of the pole (N)
- 11) Put the carriage bolt (X) through the assembly and secure with securing knob (W)
- 12) Fit the range of motion screw (U) through the assembly and secure with adjustable tilt knob (T)
Caution: The securing knob (W) must be fully tightened before the fan is operated.

OPERATING INSTRUCTIONS

1. Make sure that the fan is on a firm and level surface.
2. Plug the cord of fan into a standard AC 230V outlet.
3. The speed of the fan can be selected by speed knob (J) on the motor housing.
 - 0 – to turn “off” the fan.
 - I – low gentle fan, quiet operation.
 - II – medium fan
 - III – high fan - quick cooling & maximum air movement.
4. Fan head can be oscillated from left to right.
To operate – press down the oscillation control knob (K).
To stop the oscillation – pull up the oscillation control knob (K)
5. Fan head can be tilted up and down.
To tilt the head, loosen adjustable tilt knob (T) and adjust tilt then retighten adjustable tilt knob (T)

CARE AND CLEANING

This appliance requires little maintenance.

We recommend dust is cleaned from the fan blade and protective grills every few months, to keep it operating optimally.

After use and before cleaning, ensure the fan is OFF and the blades have come to a complete stop.

Disassemble the front & rear grill & fan. Wipe parts with a damp cloth.

Do not use abrasive cleaners, harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

Refit the parts following the assembly instructions

Wipe the outside of oscillating fan body with a damp cloth and dry with another cloth or paper towel.

SERVICE & CUSTOMER CARE

There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts (fan blade, grill covers, locking nut)

Please contact Binatone Customer Service at:



www.binatonelifestyle.com/binatone/customer-service/



www.facebook.com/BinatoneAfrica

or search @BinatoneAfrica in Facebook or Messenger to find this page easily.

Have your model number & batch code ready – it is located on the rating label on your product

WARRANTY



Save your proof of purchase sales receipt.

BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this
instruction manual responsibly**

Binatone Lifestyle Appliances

• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •