

ENGLISH

 ***Binatone***
Simply better

136/176/276L Fridge



**To get the best results from your Binatone product
please read these instructions carefully.**

FR-160 / FR-205 / FR-305



Binatone has an incredible heritage.

Established – 1958 in London, UK.

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

www.binatonelifestyle.com



IMPORTANT SAFEGUARDS


To reduce the risk of fire, electric shock, injury to persons - follow basic precautions, including the following:

- ▶ Before using this appliance for the first time, check that the appliance voltage is the same as your local supply.
- ▶ If the plug of the appliance's power cord does not fit your wall outlet, contact an authorized service center.
- ▶ Use of various adapters may result in damage to the appliance and termination of warranty.
- ▶ Only use the appliance for the purposes stipulated in the instructions. Operating this appliance in any way apart from the described manner, will lead to dangers such as short circuit, fire or more. It is not allowed to modify this product in any way, or for the housing to be opened, otherwise the product will not be any longer in compliance with its safety class.
- ▶ Only use attachments supplied with the appliance. Do not use any unauthorized attachments, they may be hazardous. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- ▶ To avoid electric shocks, do not immerse the appliance, plug or power cord in water or any other liquids. Do not place the appliance where it could come into contact with water or other liquids. If the appliance comes in contact with water, immediately disconnect it from the mains. Do not use the appliance again until it has been serviced by an authorized service centre.
- ▶ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8
- ▶ Ensure the appliance is switched off before replacing the lamp, to avoid the possibility of electric shock.
- ▶ **WARNING:** It is hazardous for anyone other than a qualified person to carry out any service or repair operation that involves the removal of the cover.
- ▶ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- ▶ The appliance is intended for household use and similar applications, such as:
 - Staff kitchen in shops, offices & other working environments
 - By clients in hotels, motels & other residential type environments
 - Farm houses
 - Bed & breakfast type environments
- ▶ The appliance shall not be cleaned with a steam cleaner.
- ▶ The appliance is intended to be used freestanding.
- ▶ The rear surface of the appliance shall be placed adjacent to a wall.
- ▶ Do not use the appliance if it has mechanical defects (dents, cracks etc.). Get it checked by the nearest authorized service center.
- ▶ Do not store or use this appliance outdoors.

SPECIFICATION

	FR-160	FR-205	FR-305
Voltage:	220-240V~ 50Hz		
Refrigerant & quantity:	R600a/38g	R600a/51g	R600a/74g
Nett Fridge/Freezer Capacity:	91L / 35L	134L / 42L	185L / 63L
Gross Fridge/Freezer Capacity:	98L / 38L	134L / 42L	204L / 72L
Energy Consumption:	0.64kWh/24h	0.72kWh/24h	0.82kWh/24h

KNOW YOUR APPLIANCE

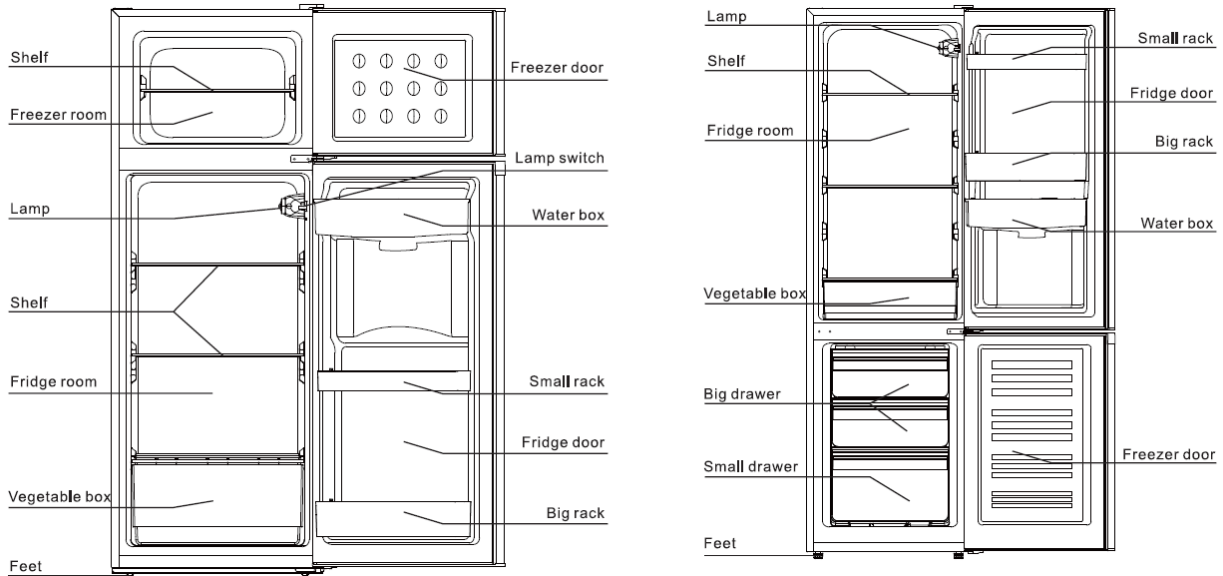

CORRECT TRANSPORTATION

1. Lift at the bottom when transporting, do not move it by holding the door.
2. Incline the unit to max 45° during transportation. Keep upright and 'keep flat' once installed.
3. Avoid crashing and violent vibrations during transportation.
4. Place the appliance in a dry and regularly ventilated room. Keep away from heat sources and oil or coal fired stoves.
5. Maintain a gap of no less than 100mm at the rear of the product and the wall. There should be adequate ventilation space to each side and at the top.
6. The appliance should be firmly on the ground - not on foam or plastic.
7. Don't place the appliance near substances which are flammable or easily corroded.

BEFORE FIRST USE

- Before using the appliance, please check the voltage and the type of plug that is required for your location. Make sure the appliance is in perfect condition.
- Remove the fridge and all materials from the carton and oven cavity. Examine the fridge for any damage such as dents or broken door. Do not install if it is damaged.

When operating for the first time, before loading food - run the refrigerator without any load until it auto stops at the desired temperature, usually it takes 2 or 3 hours. Then set the thermostat to the required setting and place foods inside.

OPERATING INSTRUCTIONS

- Don't put hot food inside the refrigerator.
- Wrap all food items with a plastic protection film to avoid dehydration and odour.
- Close the refrigerator door after each usage.
- If you do not use the refrigerator for a long period of time, disconnect the unit, clean the inside parts, put the refrigerator in a dry area and leave the door slightly open

REFRIGERATOR

The temperature can be adjusted between 0°C – 10°C by turning the thermostat.

A medium setting (4) is the most suitable for general operation. Set the thermostat to "7" - only when ice cubes are needed, or frozen foods are stored in the freezing compartment.

The temperature will vary depending on the quantity of foods stored and the frequency of the door opening. In order to maintain good cooling efficiency and save energy, we recommend you not to store too much foods and not to open the door too frequently.

CAUTION: Do not turn the thermostat beyond the max and min positions shown, otherwise it may be damaged.

FREEZER

The temperature is below -18°C.

Do not put glass items containing liquid in the freezer, as the glass may shatter. Also do not freeze carbonated beverages

ICE MAKING

After filling the ice tray with drinkable water till about 80% of its volume, put it into the freezer compartment and then set the thermostat at "7", it takes about 3 hours to make ice cubes.

WATER DISPENSER (APPLICABLE MODELS ONLY)

To fill the tank, open the cover cap and pour water inside.
Close the cover cap.


To operate:

- 1) Press the dispenser pad with a cup
- 2) Water is released when the cap is pressed. Remove the cup to halt the flow.



Removing the water tank for cleaning

- 1) Pull out the water tank, with the stopper pressed towards the arrow mark.
- 2) Empty & clean the water tank with a soft sponge, rinse and empty.

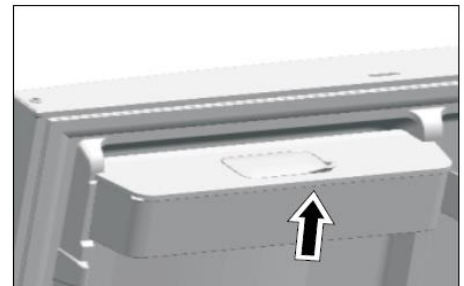

DEFROSTING

Defrost the freezer compartment whenever a layer of frost reaches 3-4 mm.

Remove all foods and ice cube trays & put the drip tray in place to collect melted water.

To start defrosting, set the thermostat to "0" position and keep the door open.

After the frost or ice has melted, discard the melt water and dry the interior of the refrigerator. The refrigerator can then be restarted by a turning its thermostat to the desired setting.

CAUTION: never use any sharp or metallic instruments (e.g. knives) to remove frost or ice from the evaporator as this will damage the interior.

CARE AND CLEANING

- Always disconnect from the power outlet and remove the food, shelves & trays.
- Use a solution of 2 spoons of baking soda per litre of warm water to clean the interior.
- Then wipe it clean with fresh water.

CAUTION: Never use acids, chemical thinner, gasoline, benzene or the like for cleaning any part of the refrigerator. Never use boiling water and benzene to clean plastic parts because they may deform or damage the plastic parts.

Too much foods stored or large container in the refrigerator will affect cold air circulation, so some free space must be left. It is recommended that about 70% of storage volume is loaded.

SERVICE & CUSTOMER CARE

There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts

Please contact Binatone Customer Service at:

	www.binatonelifestyle.com/binatone/customer-service/	
	www.facebook.com/BinatoneAfrica or search @BinatoneAfrica in Facebook or Messenger to find this page easily.	

Have your model number & batch code ready – it is located on the rating label on your product

WARRANTY

Save your proof of purchase sales receipt.



BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this
instruction manual responsibly**

Binatone Lifestyle Appliances

• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •