 


ENGLISH

 ***Binatone***
Simply better

50L FRIDGE

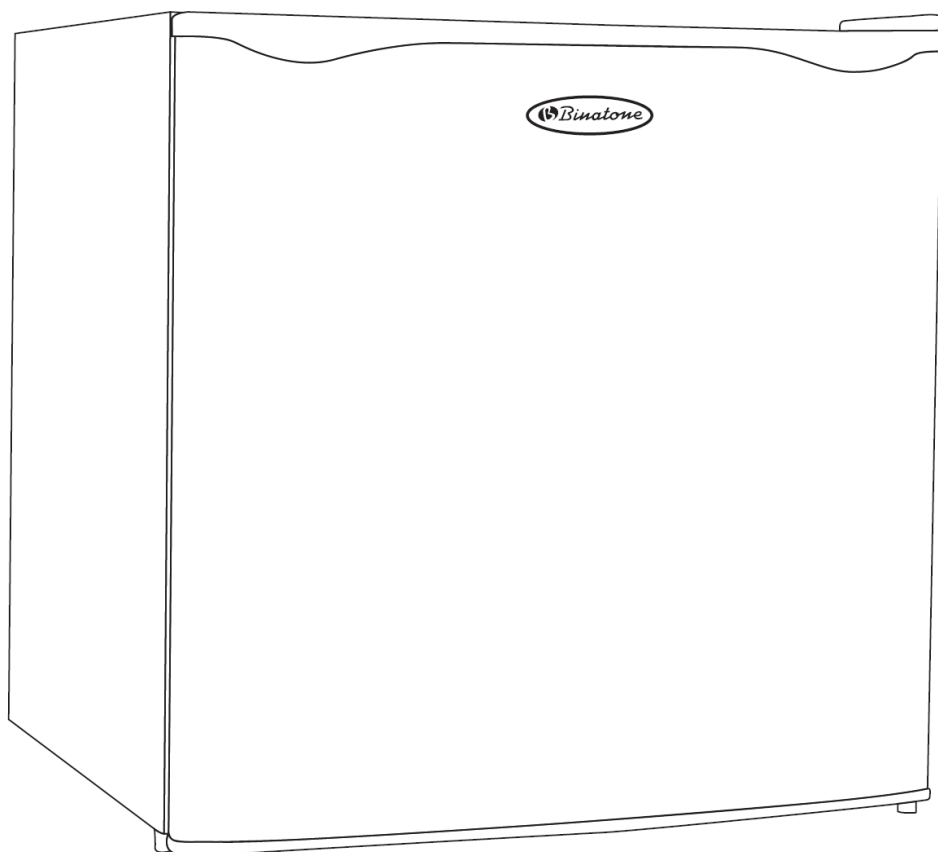

To get the best results from your Binatone product
please read these instructions carefully.

FR-50



Binatone has an incredible heritage.

Established – 1958 in London, UK.

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

www.binatonelifestyle.com



IMPORTANT SAFEGUARDS

Model FR-50 uses R600a type refrigerant

All models use cyclopentane (C₅H₁₀) foaming insulation material.

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they have been given supervision or instruction concerning the correct use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been damaged in any manner.
- ✓ This product is intended for domestic indoor use only. Do not use outdoors or for commercial purposes.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ Unplug from the power outlet when not in use & before cleaning.
- ✓ Do not pull, twist or otherwise abuse the power cord.
- ✓ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstructions
- ✓ Do not use mechanical, electrical or chemical process or other means to accelerate the defrosting process, other than those recommended by the manufacturer
- ✓ Do not damage the refrigerant circuit
- ✓ Do not store liquids in glass containers in the freezer compartment as these may shatter. Do not store bottled or canned drinks (especially carbonated drinks) in the freezer compartment. Bottles and cans may explode!
- ✓ Do not store flammable materials such as alcohol, gasoline, LP gas or glue etc in the appliance.
- ✓ R600a refrigerant & cyclopentane (C₅H₁₀) foaming insulation material are highly flammable – keep product away from open flames & other ignition sources

SPECIFICATION

Rated Voltage	: 220-240v~
Rated Frequency	: 50Hz
Wattage	: 80W
Power Consumption	: 139Kwh/year

TRANSPORTATION & HANDLING

The installation of this appliance is best carried out by 2 people.

For safe lifting, tilt the appliance backwards by no more than 45°, hold the base and rear corners of cabinet. Lift the freezer carefully. Never use the door handle(s) for lifting. To move the appliance on a flat level surface, tilt it slightly backwards onto the two rear rollers and push backwards.

This unit is heavy and could cause injury – ensure there are enough people to move the appliance safely.

BEFORE FIRST USE – SETUP INSTRUCTIONS

Carefully remove all packaging both outside & inside the product.

The appliance is designed to be free standing and should not be recessed or built in.

It should be positioned & used on a solid, level surface - clear of any materials which may obstruct the base & rear of the appliance.

 
The appliance should be positioned with at least 30cm clearance at the rear & 15cm at the sides of the product – to ensure adequate ventilation.

Locate the appliance away from direct sunlight & sources of heat. Direct sunlight may affect the finish of the plastic parts and nearby heat sources may increase electrical consumption.

Do not locate the appliance in moist areas (such as laundry rooms with washer/dryer machines).


When moving the appliance – it should be tilted no more than 45°, never on its side or upside down.

After moving the appliance – allow it to sit for at least 4 hours before connecting the appliance to power, to allow the refrigerant to settle – to reduce the possibility of a cooling system malfunction due to handling during transportation.

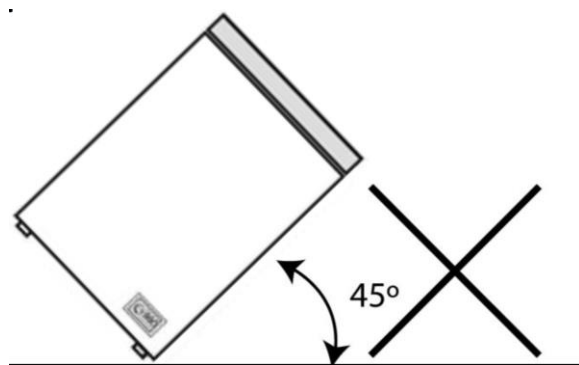

After plugging the appliance into a wall outlet, allow the unit to cool down for 4 hours before placing food in the fridge & freezer compartment.

 KNOW YOUR APPLIANCE

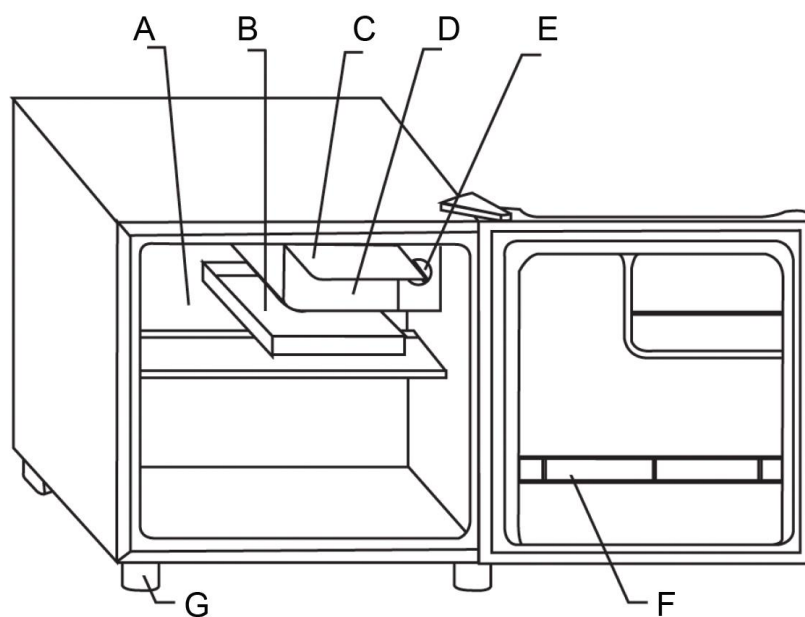


- A) Removable Shelf
- B) Drip Tray
- C) Chiller Compartment
- D) Ice Cube Tray
- E) Temperature Control Knob
- F) Door Guard
- G) Adjustable Feet

Door Orientation

This refrigerator has the capability of either opening the door from the left or right side. This unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please follow these instructions.

 Note: All parts removed must be saved to do the reinstallation of the door.

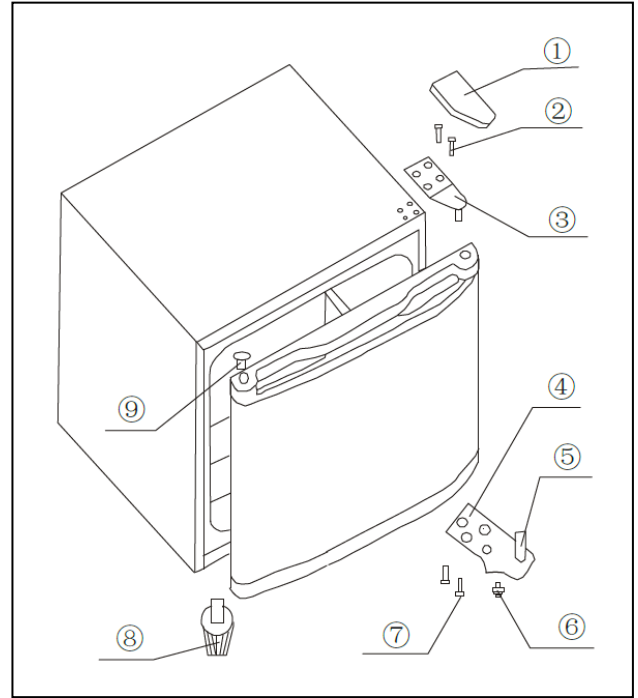

- Remove the upper hinge cap (1).
- Using a sharp object, pry out the two plug buttons (10).
- Remove the two Phillips screws (2) that connect the upper hinge (3) on the right side of the cabinet top.
- Carefully lift the door and place it on a padded surface to prevent it from scratching. Remove the plug (9) and transfer it to the uncovered hole at the right side. Be sure to press the button firmly into the hole.
- Remove the two bolts (7) that hold the lower hinge (4) on the right side.
- Remove the screw-type levelling front leg (8) and transfer it to the right side as shown in the figure below.
- Secure the lower left hinge (4) previously removed in step 5. Before placing this lower hinge, remove the bolt-pin (5) and screw-type short leg (6) and reverse the direction of the hinge.
- Insert the bolt-pin (5) and short leg (6) into the lower door hinge (4) in the new position. Set the door into its new place making sure the pin enters the bushing at the lower frame section (hole).
- Secure the upper hinge (3) previously removed in step 3 on the left side. Make sure the pin enters the bushing at the upper frame section (hole).
- Loosely secure the lower left hinge (4) and do not tighten the bolts until the door is in the closed position and levelled. Insert the plug buttons (10) on the uncovered holes (right side).
- Replace the upper hinge cap (1).

OPERATING INSTRUCTIONS

Setting The Temperature Control

The thermostat allows temperature adjustment from position 1 (the warmest) to 6 (the coldest).

Adjust the temperature control as required to suits your needs.

We recommend a setting of 3-4 for regular home use.

Using higher cold settings from (5-6) will use more energy. Only use the maximum cold setting (6) when necessary.

Use Of The Ice Cube Trays

For your ice requirements, fill tray approximately 3/4 full, after washing it.

To release the ice cubes, hold the tray upside down and twist slightly at both ends until the pieces of ice fall.

Chiller Compartment

This compartment is designed for production of ice cubes and short-term storage (3 or 4 days at the most) of some commercial frozen foods.

The temperature in this compartment does not get cold enough to freeze food safely for long periods of time.

Defrosting

Defrost whenever frost on the wall of the ice tray compartment becomes 1/4 inch thick.

Remove food and ice tray and set temperature control dial to "0".

Never use any sharp or metallic instrument to remove ice/frost as it may damage the cooling coils. We recommend using a plastic scraper.

When defrosting is completed, remove drip tray and empty water from the drip tray. Then turn temperature dial to desired setting and return food and ice tray to the refrigerator.

Defrosting usually takes a few hours. To defrost faster, keep the door open. Also, pouring warm water on the frosted part will help. Do not use boiling water as it may damage plastic parts.

CARE AND CLEANING

Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Remove food, shelf and tray.
- Wash inside with a solution of warm water and baking soda.
- Then rinse and dry.
- Do not use soaps, detergents or spray cleaners as they may cause odours inside compartment.
- Wash ice cube tray, shelf and drip tray in mild detergent solution and dry with a soft cloth.
- To help prevent odours, leave an open box of baking soda inside the refrigerator, on the shelf.
- Wipe outside of refrigerator with a soft cloth dampened with soapy water. Use only mild, soapy water to clean the door gasket.

Vacation And Moving Care

Short Vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks. Use up the perishable food.

Long Vacation

Remove all the food if you are away for three weeks or more. Unplug the appliance and leave the door open to provide air circulation to prevent odour and mould.

Moving

Remove all food. Unplug the refrigerator and clean it thoroughly.

Take out all removable parts. Wrap all parts and tape them together so they do not shift and rattle. Screw in the adjustable feet and tape the door shut.

Be sure refrigerator stays in upright position during actual moving and in vehicle. Protect outside of refrigerator with blanket.

TROUBLE SHOOTING

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide below. If the problem persists, contact Binatone Customer Service.

Problem	Possible cause	Solution
Appliance does not start	<ul style="list-style-type: none"> • The mains plug is not plugged in. • Protection devices or fuses of the electrical system at home open 	<ul style="list-style-type: none"> • Insert the mains plug. • Check the protection devices and fuses.
Appliance not cool enough	<ul style="list-style-type: none"> • Cooling system not settle after transportation • Doors not close properly • Frequently doors open • Loading food too much • Low temperature setting • Door seal dirty or sticky 	<ul style="list-style-type: none"> • Leave the appliance at least 4 hours before switching on • Check any food blockage • Reduce the frequency • Reduce the food quantity • Adjust the temperature knob • Clean per section "Care and Maintenance"
Noisy appliance	<ul style="list-style-type: none"> • Not position on even surface • Appliance is touching objects around 	<ul style="list-style-type: none"> • Install on even surface and leveling the appliance • Ensure spacing at both sides and above the appliance

SERVICE & CUSTOMER CARE



CAUTION: RISK OF FIRE

This model contains R600a which is highly flammable





There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts

Please contact Binatone Customer Service at:

	<p>www.binatonelifestyle.com/binatone/customer-service</p> <p>/</p>	
	<p>www.facebook.com/BinatoneAfrica</p> <p>or search @BinatoneAfrica in Facebook or Messenger to find this page easily.</p>	

Have your model number & batch code ready – it is located on the rating label on your product

WARRANTY



Save your proof of purchase sales receipt.

BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this
instruction manual responsibly**

Binatone Lifestyle Appliances

• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •