

ENGLISH



**YAM POUNDER, FUFU MAKER,  
MEAT CHOPPER & ICE CRUSHER**



To get the best results from your Binatone product  
please read these instructions carefully.

**KC-6000**



**Binatone has an incredible heritage.**

**Established – 1958 in London, UK.**

We are an absolutely customer centric company!

With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

[www.binatonelifestyle.com](http://www.binatonelifestyle.com)



# IMPORTANT SAFEGUARDS

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Do not modify or repair the appliance yourself. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ This appliance is intended to be used in household only and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ Do not pull, twist or otherwise abuse the power cord.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ The use of accessories attachments not included, recommended, or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.
- ✓ To avoid a circuit overload, do not operate any other high voltage equipment on the same circuit.
- ✓ Always disconnect the appliance from the supply if it left unattended and before assembling, disassembling, moving, cleaning and storing it.
- ✓ Do not let the power cord hang over the edge of your table or counter and do not allow the power cord or the appliance to come into contact with hot surfaces.
- ✓ Position the appliance and the cord so that nobody can accidentally overturn it.
- ✓ Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- ✓ Do not cover the appliance when it is hot or in use.
- ✓ Do not use the appliance if it has mechanical defects (dents, cracks etc). Get it checked by the nearest authorized service centre.

## SPECIAL SAFETY MEASURES

- ▶ Misuse of your chopper can result in injury.
- ▶ Never leave the appliance unattended while plugged in or while switched on.
- ▶ Never attempt to remove any parts during the operation of the chopper. Always wait until the blade stops running, switch off and unplug the appliance before adding ingredients, and disassembling or removing food from the bowl, or approaching parts that moves in use.
- ▶ Never disassemble the motor unit from the bowl while the power is on, the motor is running, and the blades is moving.
- ▶ Avoid contact with moving parts. Never open the bowl to put your hand or any object inside whilst it is running.
- ▶ Switch the appliance on only when fully assembled. Before use, always check whether it is assembled properly.
- ▶ Never blend hot liquids.
- ▶ Never attempt to operate the chopper with damaged blades.
- ▶ Care should be taken when handling the sharp blades, emptying the bowl and during cleaning.
- ▶ Do not leave foreign objects, such as spoons, forks, knives, etc., in the bowl as this will damage the blades and may cause injury when starting the appliance.
- ▶ Always keep hands and utensils out of the bowl to reduce risk of severe injury or damage to the unit.
- ▶ Do not overfill the bowl. This could cause damage to the motor.
- ▶ The bowl is not suitable as a storage container. Do not leave ingredients to stand inside it either before or after processing.
- ▶ Do not put hot ingredients into the bowl (must be below 50°C)
- ▶ Always use a spatula or spoon to remove foods from the bowl but only when the appliance is not running, avoid hands or fingers touching the sharp blades.
- ▶ If a burning smell, strange sounds or lowered performance are noticed during operation, unplug the chopper immediately and clean it. If normal operation is not restored, contact an authorized service center.

## SPECIFICATION

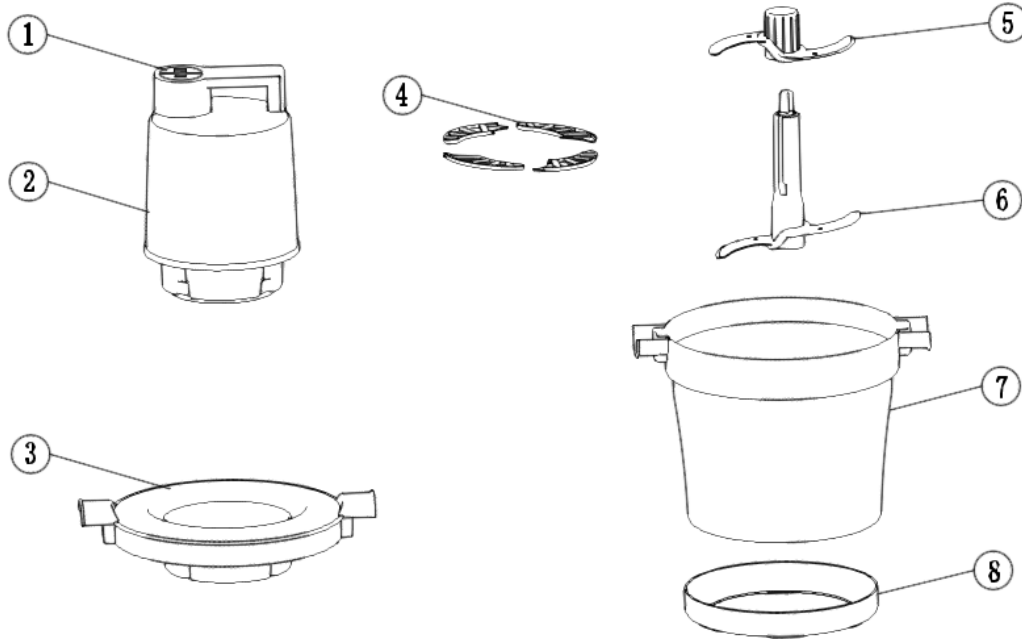 
Voltage: 220-240V~ 50-60Hz 1000W

Capacity: 6.0L Bowl

Rated working time :

Bowl 15 seconds

# KNOW YOUR APPLIANCE



- 1. Control Buttons
- 2. Motor Unit
- 3. Bowl Lid
- 4. Blade Covers

- 5. Upper Blades
- 6. Lower Blades
- 7. Stainless Steel Bowl
- 8. Plastic Base

## BEFORE FIRST USE

Carefully remove all packaging from the appliance and its accessories. Clean and dry the appliance thoroughly as described in the "CARE AND CLEANING" section.

Assemble the product following the setup & operating instructions below.

# SETUP INSTRUCTIONS

The appliance has a built-in safety switch – so it will only work if:

- a) The bowl lid is aligned and fitted to the bowl correctly
- b) The motor unit is properly and completely assembled to the bowl.

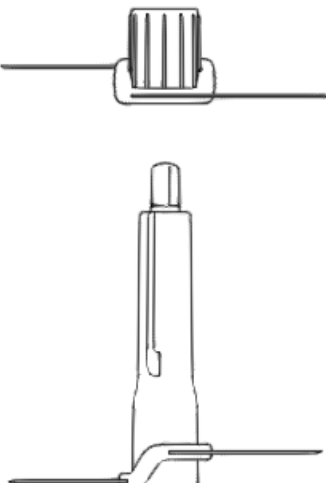 

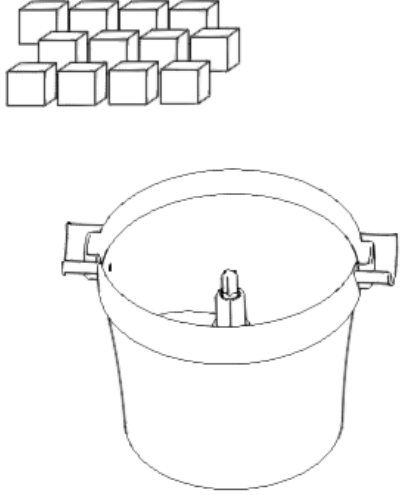 
## Preparing food:

Food	Maximum amount	Time	Remarks
Pork	1500g (Cut into 2×2×6cm pieces)	15S	Peeled, remove the tendons, boning
Beef	1500g (Cut into 2×2×6cm pieces)	15S	Peeled, remove the tendons, boning
Celery	1000g(Cut into sections)	15S	
Carrot Cucumbers	1500g (Cut into 2×2×6cm pieces)	15S	Cut off the head
Fresh millet chili	1000g	15S	Cut off the head
Green onions, onions	2000g (Cut into sections)	15S	

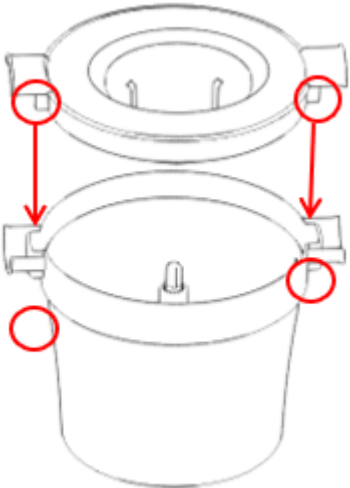 
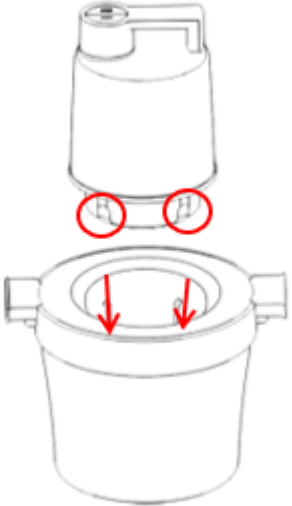 
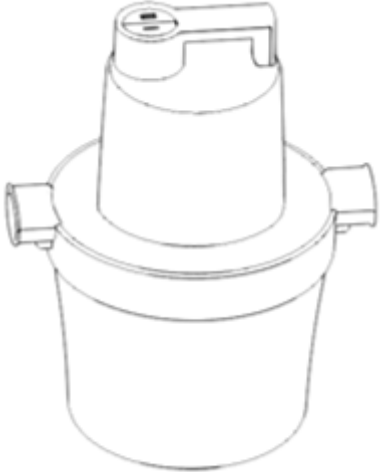 
# OPERATING INSTRUCTIONS

## Note before use:

- Place the appliance on a dry, flat and stable working surface.
- Do not plug in the appliance without the motor unit assembled to the bowl.
- Always unplug the appliance after each use.

 <p>The diagram shows two parts: the upper blade (5) and the lower blade shaft (6). The upper blade is a cylindrical component with a central pin. The lower blade shaft is a long, thin metal rod with a hook-like end. The upper blade is shown being pushed onto the shaft.</p>	 <p>The diagram shows the blade assembly (5 &amp; 6) being inserted into the bowl. The blade assembly is positioned above the bowl, and the base of the assembly is being aligned with the pin in the center of the bowl's base.</p>	 <p>The diagram shows the bowl filled with ingredients. The ingredients are represented by several small cubes. The bowl is shown with the blade assembly (5 &amp; 6) inserted into the center. The ingredients are piled up around the blade assembly.</p>
<p>Place the Upper Blade (5) onto the Lower Blade shaft (6) &amp; carefully press down until they lock together. (pay attention the blades are sharp - especially when disassembling)</p>	<p>Insert the blade assembly (5 &amp; 6) into the bowl, locating the base of the blade assembly on the pin in the centre of the bowl base.</p>	<p>Cut the ingredients into pieces according to the 'Preparing Food' chart above. Do not exceed the maximum capacity</p>

## OPERATING INSTRUCTIONS continued

		
<p>Place the bowl lid (3) onto the bowl (7). Ensure the handles are aligned and the lid fits correctly.</p>	<p>Place the motor unit (2) onto the bowl assembly (3 &amp; 7). Align the slots in the motor unit to the grooves in the bowl lid (3)</p>	<p>Press either speed 1 "I" for slow speed chopping or speed 2 "II" for high-speed chopping.</p>

**Note:** For chopping, do not operate the appliance continuously for more than 15 seconds. After continuous operation - please let the main unit rest for 3 minutes before any further usage of the appliance. After 4 cycles (each cycle with 1 min on, 3 mins off), rest the product for 30 mins or till the motor cools down, then resume.

### Motor Overload Protection

The chopper is protected by a motor overload protection, it automatically switches off the appliance if there is over-time operation or over-loaded usage. If this happens, switch off and unplug the appliance. Let it cool down for 20-30 minutes or at room temperature before use again.



## CARE AND CLEANING

- Always disconnect from the power outlet and let it cool down to room temperature before cleaning, assembling and storage.
- Always clean the appliance and its accessories immediately after use so food won't dry on them.
- Wipe the base and power cord with a damp cloth after each use.

**Note:** Never immerse the motor unit (2) and the power cord in water or any other liquids or place them under running water.

- Do not use abrasive materials, - steel wool, abrasive cleaners or corrosive liquids (such as alcohol, gasoline, acetone etc.), to clean the appliance.
- Empty the bowl before washing. Wash the bowl & bowl lid in soapy water. Rinse them then dry. Do not use any sharp or abrasive detergents.  
If food sticks to the wall of the bowl, use the spatula to remove the food from the wall.

**Note:** Never use metal utensils, as damage may occur to the bowl material.

- To clean the blade assy - pour some warm soapy water into the bowl (2), assemble to the bowl & bowl lid. Pulse the Speed 1 "I" button until they are clean. Detach the bowl and remove the blade assembly – rinse it with clean water.

**Note:** The blades are sharp. Handle them with precaution when cleaning.  
We recommend re-fitting the blade covers (4) after use.

- Some foods may discolour the plastic. This is normal and will not harm the plastic or affect the flavour of your food. Rub with a cloth dipped in vegetable oil to remove the discoloration.
- Allow the bowl & parts to be dried thoroughly before reassembling or storage.

## SERVICE & CUSTOMER CARE





There are no user serviceable parts inside this appliance.

If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:

- using your product
- servicing or repairs (in or out of guarantee)
- spare parts

Please contact Binatone Customer Service at:

	<a href="http://www.binatonelifestyle.com/binatone/customer-service/">www.binatonelifestyle.com/binatone/customer-service/</a>	
	<a href="http://www.facebook.com/BinatoneAfrica">www.facebook.com/BinatoneAfrica</a> or search @BinatoneAfrica in Facebook or Messenger to find this page easily.	

Have your model number & batch code ready – it is located on the rating label on your product

# WARRANTY

**Save your proof of purchase sales receipt.**



BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR & SERVICE/REPLACEABLE PARTS: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

HOW TO OBTAIN WARRANTY SERVICE: Please contact BINATONE Customer Service (see Service & Customer Care section)



**Please consider recycling this  
instruction manual responsibly**

**Binatone Lifestyle Appliances**

**• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •**