



## STEAM IRON

SI-2225



To get the best results from your Binatone product please read these instructions carefully.

Binatone has an incredible heritage.  
Established – 1958 in London, UK.

We are an absolutely customer centric company! With more than 60 years delivering quality products to our customers in more than 75 countries – our global footprint enables economies of scale.

This allows us to offer you some of the world's highest performance, quality & value products available in the market today.

Our commitment lies solely in delivering high quality, affordable products.

Our international team is constantly pursuing every effort to make products not just 'appliances' but 'lifestyle improvements'.

Check out all the latest Binatone products at:

[www.binatonelifestyle.com](http://www.binatonelifestyle.com)



## IMPORTANT SAFEGUARDS

When using electrical appliances – especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons.

- ✓ READ ALL INSTRUCTIONS
- ✓ Make sure your power supply is consistent with the rated specification of the product before connecting.
- ✓ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge – unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ✓ Do not operate any electrical appliance with a damaged cord or plug – or after the appliance malfunctions or has been dropped or damaged in any manner. Do not modify or repair the appliance yourself. Return the appliance to the nearest authorised service facility for examination, repair or adjustment.
- ✓ This product is intended for domestic indoor use only. Do not use outdoors or for commercial purposes.
- ✓ To protect against electric shock, do not place the product, cord or plug in water or other liquid.
- ✓ Do not pull, twist or otherwise abuse the power cord. Never pull the cord to disconnect the appliance, instead grasp the plug and pull it to disconnect.
- ✓ Use this appliance only for its intended use – as described in this manual.
- ✓ The use of accessory attachments not included, recommended, or sold by Binatone is prohibited and may cause damage, fire, electric shock or injury.
- ✓ To avoid a circuit overload, do not operate any other high voltage equipment on the same circuit.
- ✓ Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, moving, cleaning and storing it.
- ✓ Do not let the power cord hang over the edge of your table or counter, and do not allow the power cord or the appliance to come in contact with hot surfaces.
- ✓ Position the appliance and the cord so that nobody can accidentally overturn it.
- ✓ Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- ✓ Do not cover the appliance whilst it is hot or in use.
- ✓ Do not use the appliance if it has mechanical defects (dents, cracks etc.). Get it checked by the nearest authorized service centre.



**WARNING!** Please do not touch surface while in use. The accessible surface may get hot when the appliance is operating.

## SPECIFICATION


Voltage: 220-240V~ 50-60Hz

This Steam Iron is intended for ironing of different fabrics. It is only to be used for household purposes and is not meant for commercial or industrial use. Not to be used outdoors.

Power: 2000-2400W  
Water tank: 250ml  
Steam Rate: 17.0g/min

Soleplate: Ceramic

## KNOW YOUR APPLIANCE

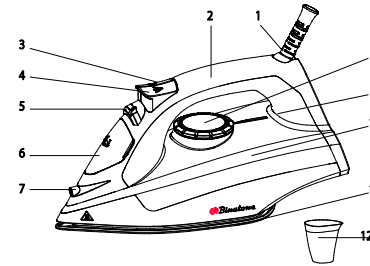

- 1. 360° Pivot Cord
- 2. Handle
- 3. Burst of Steam Button
- 4. Spray Button
- 5. Steam Control with Self Cleaning setting
- 6. Water Filling Cover
- 7. Spray Nozzle
- 8. Temperature Control Dial
- 9. Indicator Light
- 10. Water Tank
- 11. Soleplate
- 12. Measuring Cup

## BEFORE FIRST USE

- Remove all packing materials from the appliance and its accessories. Clean the soleplate with a soft cloth. Iron a clean old piece of cotton cloth to make sure the soleplate and the water tank are absolutely clean.
  - Always make sure the steam control is in "☼" position and the temperature control dial in "OFF" position before plugging in or after each ironing.
  - Always place the iron in a vertical position when it is left unattended or when storing.
  - The iron must be used and rested on a stable surface.
- Note:** Light smoke emission may occur during the first use of the appliance. It is a normal occurrence that will soon disappear.

## SPECIAL SAFETY MEASURES

- ✓ The iron must not be left unattended while it is connected to the supply mains.
- ✓ Always disconnect the iron from the mains when filling or draining the water tank.
- ✓ The water filling cover must be closed during use or after use.
- Note:** Always use the measuring cup provided to refill the water.
- ✓ Care should be taken when using the appliance due to the emission of steam.
- ✓ Do not leave the hot iron in a horizontal position. Place it upright on a heat resistant surface.
- ✓ The iron gets hot when in operation and retains heat for some time after turning off. Any skin contact with metal surfaces and soleplate may result in burns. Extreme caution must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

## SPECIAL SAFETY MEASURES cont.

- ✓ Never iron or steam iron articles being worn by a person.
- ✓ Avoid any contacts between the soleplate and plastic fittings of an article: buttons, zippers, labels, etc. These items may scratch and damage the soleplate coating.
- ✓ The iron should always be connected to a grounded main electricity supply.
- ✓ If you intend to iron with spray or steam, always fill the water tank with enough water but not overflow beyond the "MAX" mark on the tank. In case of exceeding the "MAX" mark on the water tank, water can overflow through the filler and get into the electronic module of the iron, which can lead to failure of the device.
- ✓ Always let the iron cool down completely when it is not in use, when filling it with water or pouring out water, and while storing it.

## OPERATING INSTRUCTIONS

1. Hold the steam iron in a horizontal position. Fill the water tank with normal tap water. Do not fill over the MAX level on the tank. Use the measuring cup provided to fill the water.  
**Note:** If your area has hard water, we recommend you use filtered or distilled water. Do not fill the tank with other liquids (vinegar, starch, descaling agents or other chemicals).
  2. Place the iron into a vertical position.
  3. Insert the power plug into the mains supply outlet.
  4. Turn the temperature control dial to set the temperature according to the garment label. The indicator light will turn on indicating the iron is being heated. When the set temperature level is reached, the indicator light will turn off and the iron is ready to use.
- Note:** During operation, the indicator will light up and turn off periodically. This is normal and not a malfunction.
5. If the garment label is missing, and the type of material is known, follow the recommendations below:

Fabric	Temperature Control	Temperature
Synthetic Nylon Acrylics Polyester Rayon	•	Low
Silk Wool	••	Medium
Cotton Linen	•••	High

**Note:** If the fabric consists of various kinds of fibres, always select the lowest ironing temperature of the composition of those fibres.

6. Once ironing is finished, always turn the temperature control dial to "OFF" and unplug the appliance.
7. Empty the water tank and let the iron cool down completely before storage.  
**Note:** If during the process of ironing your water tank runs out of water, set steam control to "☼" position and temperature control to "OFF", disconnect the iron from the mains outlet, let it cool down, refill the tank and plug the iron back into the power supply to continue ironing.

### Dry Ironing

Dry ironing can be used at any temperature setting. To do this the steam control button must be put into the "☼" position.

### Steam Ironing

Steam function can only be used at the higher temperature (between •• and •••), otherwise water may leak from the soleplate.

## OPERATING INSTRUCTIONS cont.

- Make sure that there is enough water in the water tank but not over the "MAX" level and the steam control is at "☀️" position.
- Turn the temperature control dial to •• or ••• setting.
- Allow the iron to heat to the required temperature level then put the steam control into the required position (minimum "☁️" or maximum "☀️" depending on the quantity of steam required).

**Caution:** It is not advisable to use the steam function for Synthetic Fabrics, Nylon, Synthetic Silk and Silk, as it will damage the finish of the fabric.

### Steam Boost Function

To ease ironing of dense cotton, linen and upholstery articles use the steam burst button: engagement of the button during the ironing process generates an extra burst of steam from the soleplate to help remove stubborn creases.

- Make sure that there is enough water in the tank.
- Set the temperature control to ••• setting until the indicator light goes off.
- Set the steam control to the position "☁️".
- Press the steam burst button to generate a powerful burst of steam that can penetrate the fabrics and smoothen difficult and tough creases. In order to achieve the best steaming result and to prevent leakage of water from the soleplate, press the 'burst of steam' button twice with an interval of 3-5 seconds between each burst of steam.

**Note:** The steam boost function can only be used at the highest temperature settings and with enough water in the water tank. In order to prevent water leaking from the soleplate, please do not press the steam burst button continuously.

### Vertical steam boost

You can also use the steam boost function when you hold the iron in vertical position. This function helps to refresh the appearance of curtains, jackets, coats, etc.

- Before using the vertical steam function, set the temperature control to ••• setting and make sure that there is enough water in the water tank.
- While holding the iron in a vertical position, aim its soleplate towards the articles to be ironed and press the steam burst button to produce a directional strong burst of steam from the soleplate. Push the button several times with 3-5 seconds intervals until the article is fully refreshed.

**Note:** Never direct the steam at people!

### Spray function

Spray function is available for steam or dry ironing. Using the water spray will help when ironing details of the article or clothes (cuffs, trimmings, plackets, etc.), which demand low temperature ironing, when steam ironing is not possible. Push the button several times to moisten the material as required.

- Make sure that there is enough water in the water tank.
- Press the spray button slowly (for a dense spray) or quickly (for a vaporized spray).

**Note:** for delicate fabrics, we recommend moistening the fabric beforehand using the spray function or putting a damp cloth between the iron and the fabric. To avoid staining, do not use the spray on silk or synthetic fabrics.

## OPERATING INSTRUCTIONS cont.

### Operating Tips

#### Selection of temperature settings

- Before ironing, we recommend that you organize your clothes, based on their types of material and the recommended temperature settings.
- We recommend that you start ironing articles that require lower temperature settings first: the iron heats up quicker than it cools down.
- When ironing articles made with a combination of fibres, start with the temperature recommended for the most delicate material first (for example, to iron a cloth made of cotton and polyester select the temperature recommended for ironing polyester first).
- If you do not know the fabric type, find a place on the article which will not be seen and test ironing it to select the appropriate temperature, start with the minimum setting.

#### Ironing of selected fabrics

- Do not use the Spray mode while ironing silk articles - drops of water leave spots on silk garments. Use dry ironing at a moderate temperature, as excess heat may scorch the article and form yellow mark.
- Wool, velour, velvet, and similar pile fabrics must be ironed on the inside.
- To prevent shiny marks on the fabric we recommend that you iron woollen articles through a thin cotton cloth and set the steam control to the maximum position.
- Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.
- To avoid marking velvet garments shiny, iron it in one direction (following the fibre) and do not press down on the iron.
- Many fabrics are easier to iron if they are not completely dry. For example, silk should always be ironed damp.

## CARE AND CLEANING

- Always unplug and let the appliance cool down before cleaning and storage.
- Make sure that any cleaning necessary is carried out only when the iron has completely cooled down.
- Do not immerse the iron in water.
- Always empty the water tank when the iron is not in use or when storing, to avoid scaling or steam holes being blocked, for a longer service time of the appliance.

### Cleaning of the iron

Clean the upper part of the iron with a damp cloth.

### Cleaning of the sole plate

Do not use any abrasive substances and materials to clean the soleplate. Wipe flakes and any other deposits off the soleplate with a damp cloth and a non-abrasive cleaning agent. Avoid scratching the plate with steel wool or metallic objects.

### Cleaning of water tank

Regularly rinse the water tank with water. Empty the water tank after you have rinsed it.

### Self-cleaning function

Regularly clean any deposits on the iron or when flakes come out from the soleplate during ironing. The self-clean function allows you to clean scales or dust from the internal parts of the iron. If the water in your area is soft, and you have average amounts of clothes to be ironed, then we recommend using the self-clean function every month.

If the water in your area is very hard or if you iron frequently, we recommend using the self-clean function every two weeks or more often. For longer unit life and better ironing results, we recommend using filtered water.

**Warning:** In areas with very hard water it is recommended that you regularly remove scales from the iron to maintain it in good working order. Excess lime scale may result in the damage or malfunctioning of your iron.

To use this function, perform the following procedure:

1. Set the steam control to the "☀️" position.
2. Fill half of the water tank.

3. Place the iron in a vertical position and plug it into the mains supply outlet.

4. Set the temperature control to ••• setting and wait for the pilot light to turn off.

5. Set the temperature control to "OFF", disconnect the iron from the main supply outlet. Whilst holding the iron horizontally over a sink, set the steam control to the position "☁️" and gently shake the iron. Hot steam and boiling water will be discharged from the soleplate, removing the scale and dust.

6. When the water tank is completely empty, set the steam control to "☀️" position.

7. Repeat the self-clean process if the iron still contains a lot of impurities.

8. When the soleplate has cooled down, clean it with a damp cloth.

9. Place the iron in a vertical position and re-heat it.

10. To complete the cleaning process, iron a piece of old but clean cotton cloth in order to clean the soleplate of any remaining dust and scale and to help evaporate the remaining water. When you have finished ironing, always switch the iron off and disconnect it from the electrical supply.

### Storage

Before storing the iron, make sure it is disconnected from the mains supply outlet and is completely cooled down. Drain the remaining water from the tank by opening the cover and holding the iron upside down over the sink. Ensure the water tank is completely empty. Store the appliance in the upright standing position after it cools down completely.

## SERVICE & CUSTOMER CARE

There are no user serviceable parts inside this appliance. If the power cord or plug are damaged it must, for safety reasons, be replaced by Binatone or an authorised Binatone repairer.

If you need help with:  
using your product  
servicing or repairs (in or out of guarantee)  
spare parts

Please contact Binatone Customer Service at:



[www.binatonelifestyle.com/binatone/customer-service/](http://www.binatonelifestyle.com/binatone/customer-service/)



[www.facebook.com/BinatoneAfrica](https://www.facebook.com/BinatoneAfrica)  
or search @BinatoneAfrica in Facebook or Messenger to find this page easily.

Have your model number & batch code ready – it is located on the rating label on your product



Please consider recycling this instruction manual responsibly

## WARRANTY

Save your proof of purchase sales receipt.



BINATONE warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of two (2) years.

This is a domestic product – warranty does not cover products that have been used for commercial purposes.

BINATONE at its option, will repair or replace a product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, BINATONE will repair or replace the same effecting all necessary part replacements.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centres, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on BINATONE products.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR & SERVICE/REPLACEABLE PARTS:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than BINATONE or an authorized service centre; service parts replaced by user. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, tornadoes etc.

Customers connecting BINATONE appliances directly to the mains power outlet or using a non-BINATONE stabilizer, risk voiding their BINATONE warranty. We recommend using quality BINATONE stabilizers for your protection – be wise, buy the best – always buy BINATONE

**HOW TO OBTAIN WARRANTY SERVICE:** Please contact BINATONE Customer Service (see Service & Customer Care section)

Binatone Lifestyle Appliances  
• LONDON • HONG KONG • DUBAI • LAGOS • ACCRA •