

1-正面

95mm

95mm

95mm



Instruction Manual
RCSG 1505, 1805, 2205, 2805



Rice Cooker




1-背面

Binatone has an incredible heritage. Established 1958 in London.

We are an absolutely customer centric company! Words that are backed up with more than half a century of successfully delivering quality products to a customer base that spans more than 75 countries.

Binatone a un héritage incroyable. Créé en 1958 à Londres.

Nous sommes une société absolument centrée sur le client! Des mots soutenus avec plus d'un demi-siècle de livraison réussie de produits de qualité à une clientèle qui s'étend sur plus de 75 pays.

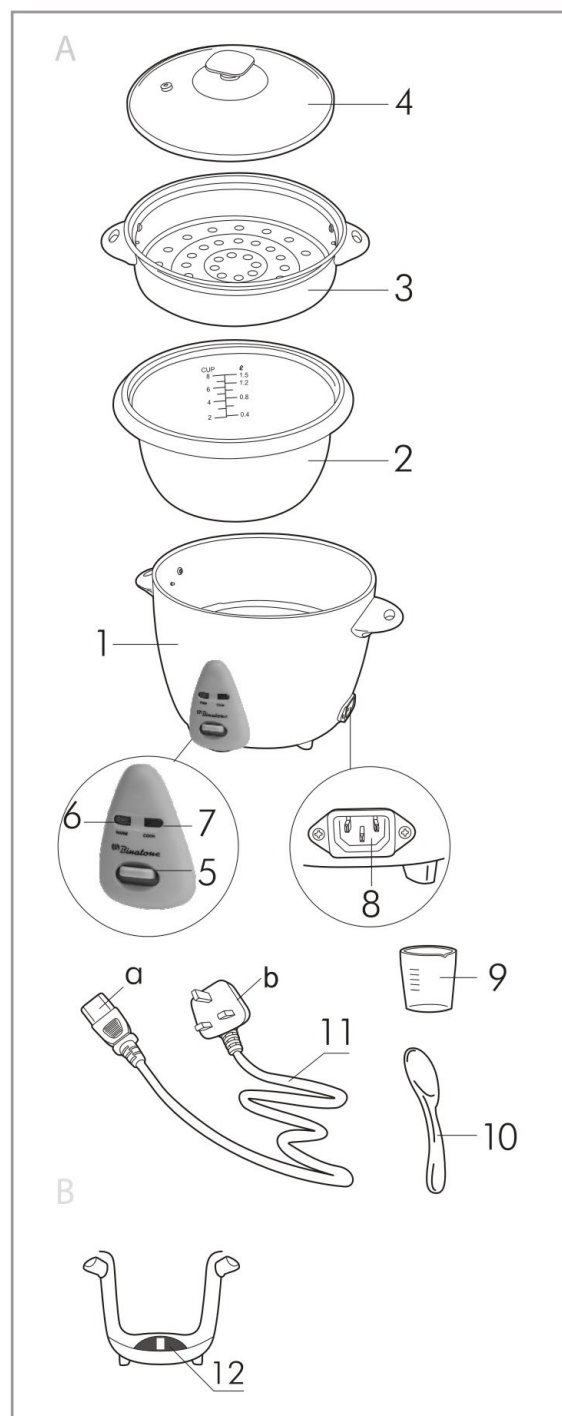

- 3. Lavez le bol intérieur (2), le couvercle en verre (4) et le panier (3) à l'eau chaude au savon.
Attention: Ne pas utiliser de produits abrasifs ou durs.

RECYCLAGE

Appareils électroménager doit être utiliser avec le moindre tort pour l'environnement et en conformité des règles d'utilisation des déchets dans votre région.

SERVICES APRES VENTE

- Si votre appareil ne fonctionne pas ou fonctionne mal, adressez-vous à un centre agréé pour consultation ou réparation.
La garantie n'est pas valable dans les cas suivants:
- Non-respect des mesures de sécurité sur l'appareil.
- Utilisation commerciale (utilisation dépassant les besoins personnels ménagers).

Le délai de garantie et autres pièces sont indiqués dans le ticket de garant joint à l'appareil.
Fabricant: Binatone Industries Ltd, Great Britain, U.K, 10th Floor, 6 Mitre Passage, Greenwich, London, SE10 0ER.

2-正面

NOTICE D'UTILISATION

- 1. Mesurez la quantité nécessaire de riz à l'aide du verre gradué (9). Mettez le riz dans le bol intérieur (2) avec l'eau tiède en quantité recommandée par le producteur du riz.

Note: Déconnectez l'appareil du réseau après l'utilisation ou si vous n'avez pas besoin de maintenir la température du riz.

Utilisation du panier pour cuisson à vapeur

Versez de l'eau dans le bol (2) et placez au-dessus le panier (3) avec les aliments, ensuite recouvrez l'autocuiseur avec le couvercle (4).

Note: Vous pouvez cuire à la vapeur le poisson, la viande, les légumes et d'autres aliments suffisamment grands pour ne pas tomber dans l'eau à travers les trous du panier (3).

ENTRETIEN ET NETTOYAGE

- 1. Avant de nettoyer ou de ranger l'appareil déconnectez-le du secteur et attendez le refroidissement complet.
2. Pour éviter le choc électrique, ne pas plonger le corps de l'appareil (1) et le cordon d'alimentation (11) dans l'eau.

ENGLISH .....4

ENGLISH

FRANÇAIS .....8

FRANÇAIS

2-背面

Please read the safety instructions carefully before using this appliance. Please retain the instructions for future reference.

SAFETY MEASURES

- When using your appliance, the following basic safety precautions should always be followed:
- Before using for the first time, check that the appliance voltage is the same as your local supply.
- Only use the appliance for the purposes stipulated by the instructions.
- Only use attachments supplied with the equipment.

SPECIALES DE SECURITE

- Cet appareil n'est destiné qu'à la préparation du riz sans additifs et pour le maintien de sa température, et n'est pas destiné à d'autres utilisations telles que préparation des soupes, ébullition d'eau etc., car dans le cas d'utilisation pareille l'eau peut déborder de l'appareil.

DESCRIPTIF DES PIÈCES DE L'APPAREIL

- 1. Corps
2. Bol intérieur
3. Panier pour cuisson au vapeur
4. Couvercle en verre
5. Bouton marche/arrêt
6. Indicateur rouge
7. Indicateur jaune
8. Logement de connexion du cordon d'alimentation
9. Verre gradué
10. Cuiller
11. Cordon d'alimentation
a. Connecteur du cordon d'alimentation
b. Fiche de prise de courant
12. Élément chauffant (dessin B)

AVANT L'UTILISATION

Enlevez les matériaux d'emballage de l'appareil. Lavez le bol intérieur (2) à l'eau tiède au savon et séchez soigneusement. Assurez-vous que l'appareil est déconnecté du réseau.

3-正面

Lisez attentivement cette instruction avant le premier usage pour prendre connaissance du fonctionnement de l'appareil. Gardez l'instruction pour s'y référer ultérieurement.

MESURES DE SECURITE

- En exploitant l'appareil, respectez toujours les mesures de sécurité suivantes:
- Avant le premier usage, assurez-vous que la tension indiquée sur l'appareil correspond à la tension du réseau électrique dans votre maison.
- Utilisez l'appareil seulement à des fins indiquées dans cette instruction.

SPECIAL SAFETY PRECAUTIONS

- This appliance is intended for cooking rice, with no added ingredients and for keeping the cooked rice warm. This rice cooker is not intended for any other purpose like making soup or boiling water.

DESCRIPTION OF THE APPLIANCE

- 1. Housing
2. Inside bowl
3. Steam basket
4. Glass lid
5. ON/OFF key
6. Red indicator light
7. Yellow indicator light
8. Power supply cord socket
9. Measuring cup
10. Spoonula
11. Power supply cord
a. Power supply cord connector
b. Mains plug
12. Heating element (Figure B)

BEFORE USE

Unpack the rice cooker and remove all the packing material. Clean the inside bowl (2) with warm soapy water and dry it up thoroughly. Make sure the rice cooker is unplugged.

3-背面

OPERATING MANUAL

- 1. Use the measuring cup (9) to take the required amount of rice. Put the rice into the inside bowl (2) and add some warm water. Follow the rice manufacturer's recommendations to determine the best water-to-rice ratio.

How to Use Steam Basket

Pour some water into the bowl(2) and place the basket (3) with the foodstuffs on top of it. Then put the lid (4) on the rice cooker. Follow items 2-3 of the 'Operation Manual' section. When the cooking is over take the basket (3) off the bowl (2) or the cooking will continue.

MAINTENANCE AND CLEANING

- 1. Unplug the rice cooker from the mains and wait until the appliance has cooled down before proceeding with cleaning or storage.
2. Do not immerse the cooker housing(1) or the power supply cord (11) into the water. Clean those cooker parts with a slightly moistened lint-free cloth without adding any cleaning agents.

- 3. Wash the inside bowl (2), glass lid (4) and the basket (3) with hot soapy water.
WARNING! Do not use any abrasive or coarse cleaners!
4. Reassemble the rice cooker after its parts are completely dry.

DISPOSAL

The appliance should be disposed of in accordance with waste disposal regulations in your country and with the least damage to the environment. Only ecologically safe materials are used in the packaging of our products and the cardboard and paper can be disposed of with normal paper waste.

AFTER-SALES SERVICE

- If your appliance does not operate at all or operates poorly, call an authorized service center for help or repairs.
The warranty does not cover the following:
- Non-observance of the above safety measures and operation instructions.
- Commercial use (use outside the scope of personal household needs).

Features may be changed by Binatone without any notice. Warranty details are set out in the warranty card provided with the product.

Manufacturer: Binatone Industries Ltd, Great Britain, U.K, 10th Floor, 6 Mitre Passage, Greenwich, London, SE10 0ER.

ENGLISH

ENGLISH

Binatone

210mm

FRANÇAIS